

P550W Series Air Dryers



User's Guide

Models covered:

P550W P550WH P550WLP P552W P552WH P552WLP



1. Welcome & Congratulations

Congratulations on your purchase of a new PUREGAS P550W Series Air Dryer! We here at PUREGAS are very proud of our products and we are committed to providing you with the best value and service possible.

We are sure that you will be satisfied with your new air Dryer and would like to thank you for choosing PUREGAS for your air Dryer requirements. We also hope that you will continue to choose us for your future air pressure and related product purchases.

For information about this and other PUREGAS products, please visit us on the web at:

www.puregas.com

2. Introduction

PLEASE READ THIS USER'S GUIDE THOROUGHLY AND SAVE FOR FUTURE REFERENCE.

This User's Guide is provided for the benefit of our customers and contains information and direction specific to the PUREGAS P550W Series Air Dryers. Models covered include P550W, P550WH, P550WLP, P552W, P552WH, and P552WLP. This guide covers topics including: safety, specifications, installation, registration, operation, testing, maintenance, replacement parts, service, and troubleshooting issues. Observation and compliance with this User's Guide will ensure the maximum life and efficiency of your air Dryer.

This User's Guide should be read thoroughly prior to installing, operating, or servicing the air Dryer in order to become familiar with the recommended procedures. This will minimize the possibility of personal injury or damage to the unit due to improper operation or handling.

3. Table of Contents

1. Welcome & Congratulations.....	3	8.14 Connecting via Web Browser.....	43
2. Introduction.....	3	8.15 Using the Status Screen.....	45
3. Table of Contents.....	4	8.16 Using the Config Screen	48
4. Safety & Warning Information	6	8.17 Using the Event Screen	51
5. Overview & Specifications	8	8.18 Using the Alarm Screen	52
5.1 Product Description	8	8.19 Using the Firmware Screen.....	53
5.2 Key Features	8	8.20 Connecting via SNMP.....	55
5.3 P550W Series Air Dryer Models	8	9. Testing Your Dryer	56
5.4 Technical Specifications	9	9.1 Safety & Warning Information.....	56
5.5 Dryer Function Overview	10	9.2 Measuring Compressor Amp Draw.....	57
6. Installing Your Dryer	11	9.3 Measuring Compressor Voltage.....	58
6.1 Safety & Warning Information	11	9.4 Measuring Incoming Voltage.....	60
6.2 Before You Begin	12	9.5 Measuring Voltage from AC Step-Down Transformer.....	61
6.3 Included Contents	13	9.6 Testing Consistent Heatless Dryer Cycling...62	
6.4 Required Tools and Materials.....	13	9.7 Testing Unloader Valve	64
6.5 Installation Steps.....	14	9.8 Measuring Heatless Dryer Solenoid Voltage 65	
6.6 Installation Checklist	22	9.9 Testing Air Dryer Fan	66
7. Registering Your Dryer.....	23	9.10 Testing Compressor ON/OFF Cycling.....	66
8. Operating Your Dryer.....	24	9.11 Testing High Compressor Last Run Time Alarm	68
8.1 Safety & Warning Information	24	9.12 Testing Humidity Alarm and System Shutdown	69
8.2 Connecting Air Supply Lines to the Dryer ...	25	9.13 Testing High Outlet Pressure Alarm	71
8.3 Depressurizing the Dryer.....	26	9.14 Testing Low Outlet Pressure Alarm	72
8.4 Powering the Dryer ON & OFF.....	26	9.15 Testing Air Fittings & Hoses for Leaks.....	73
8.5 Using the Front Panel Display	27	10. Maintaining Your Dryer	74
8.6 Identifying Dryer Alarms.....	29	10.1 Safety & Warning Information.....	74
8.7 Adjusting & Resetting Dryer Set Points	31	10.2 Six Month Maintenance	76
8.8 Open Panel.....	39	10.3 8,000 Hour Maintenance	77
8.9 Setting the System Pressure.....	39	11. Replacement Parts & Accessories	78
8.10 Setting the Static Pressure.....	40	11.1 Dryer Parts	78
8.11 Setting the Outlet Pressure.....	40	11.2 Dryer Parts cont.....	79
8.12 Connecting to Common Alarm Terminals..	41	11.3 Heatless Dryer Assembly Parts	80
8.13 Connecting to Power Fail Alarm Terminals	42	11.4 Accessories for Your Dryer.....	81

11.5 Ordering Parts from PUREGAS	82	13.16 Compressor Excessive AMP Draw	91
12. Service & Repair	83	13.17 High Compressor Last Run Time Alarm...92	
12.1 Services Offered	83	13.18 Can't Create a High Compressor Last Run	
12.2 Initiating a Service Transaction	83	Time Alarm	92
13. Troubleshooting Your Dryer	84	13.19 Compressor Rapid ON/OFF Cycling	93
13.1 Before You Call PUREGAS	84	13.20 Contacting PUREGAS Technical Support	93
13.2 Safety & Warning Information	84	14. Appendix	94
13.3 Air Dryer Won't Power ON.....	85	14.1 Wiring Diagram	94
13.4 Display Screen Not Functioning	86	14.2 Set Point Limits and Defaults.....	95
13.5 High Outlet Pressure Alarm.....	86	14.3 SNMP Parameters	96
13.6 Can't Create a High Pressure Alarm.....	86	15. Limited Warranty Agreement.....	97
13.7 Low Outlet Pressure Alarm	87	Registration Reminder	97
13.8 Can't Create a Low Pressure Alarm	87	16. Contacting PUREGAS	98
13.9 High Humidity	88	16.1 General	98
13.10 Can't Create a High Humidity Alarm /		16.2 Sales	98
Shutdown.....	89	16.3 Service.....	98
13.11 High Flow Rate Alarm.....	89	16.4 Technical Support	98
13.12 High Cabinet Temperature Alarm.....	89	17. Notes	99
13.13 Inconsistent Heatless Dryer Cycling.....	90		
13.14 Compressor Doesn't Operate.....	90		
13.15 Compressor Won't Build Pressure.....	91		

4. Safety & Warning Information

This section contains general information about safety and warning points to consider and adhere to during installation, operation, and maintenance of your air Dryer. PLEASE READ THIS SECTION BEFORE PERFORMING ANY OPERATION OR PROCEDURE ON YOUR AIR DRYER.

Additional warnings specific to an operation or procedure will also be presented throughout the following sections. These will include the ⚠ symbol as well as a label of “**WARNING!**”, “**CAUTION!**”, or “**IMPORTANT!**”. Please be sure to pay close attention for these warnings and read them as you encounter them.



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.

**CAUTION!**

Proper Installation & Maintenance as outlined in this User's Guide is extremely important to ensure the reliability and longevity of the equipment as well as prevent damage or personal injury.

**CAUTION!**

Depressurizing the air Dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air Dryer first, or **damage to the Control Board will occur.**

**CAUTION!**

Incoming power to Dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P550W models
- 208 - 253 VAC, 50/60 Hz, 1 Phase for P552W models

**IMPORTANT!**

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air Dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

5. Overview & Specifications

5.1 Product Description

The P550W Series Air Dryers from PUREGAS are designed to intake wet ambient air and remove the moisture for delivery to applications requiring a constant, on-demand source of dry, pressurized air. This process is fully automatic and will remain consistent with minimal required periodic maintenance. These dryers are designed specifically for indoor use.

The P550W Series Air Dryers employ a fully digital operating platform offering the most accurate readings of Dryer variables, removable access panel allowing easier access for adjustment and maintenance, and ultra quiet compressor with an industry leading maintenance interval of 8,000 hours.

5.2 Key Features

- LCD display of all operating parameters
- Solid state microprocessor-based circuitry eliminates costly maintenance
- Accurate humidity sensing within $\pm 0.1\%$ RH
- Quietest Dryer on the market - less than 50 dBA
- Oil-less compressors with 8,000 hour maintenance interval


5.3 P550W Series Air Dryer Models

Model	Description
P550W	Single Pressure Outlet, 110- 125 VAC, 2-15 PSI
P550WH	4-Bank Outlet Manifold, 110 - 125 VAC, 2-15 PSI
P550WLP	Low Pressure, Single Pressure Outlet, 110 – 125 VAC, 0.30 – 7.50 PSI
P552W	Single Pressure Outlet, 208 - 253 VAC, 2-15 PSI
P552WH	4-Bank Outlet Manifold, 208 - 253 VAC, 2-15 PSI
P552WLP	Low Pressure, Single Pressure Outlet, 208 - 253 VAC, 0.30 – 7.50 PSI

5.4 Technical Specifications

	P550W	P550WH	P550WLP	P552W	P552WH	P552WLP
Output Capacity	Normal: Up to 350 SCFD continuous Maximum: 550 SCFD emergency					
Power Requirements	110 - 125 VAC, 50 / 60 Hz, 7.0 Amps			208 - 253 VAC, 1 Phase, 50 / 60 Hz, 3.5 Amps		
Outlet Pressure Range	2 – 15 PSI		0.30 – 7.50 PSI	2 – 15 PSI		0.30 – 7.50 PSI
Outlet Air Humidity	Less than 2% RH					
Compressor Type	Two-cylinder, 1/3 HP, oil-less type					
Drying Method	Heatless Desiccant					
Operating Temperature Range	40° to 85° F (optimal)					
Noise Level	51 dBA at 3', 48 dBA at 10'					
Alarms	Standard alarms – complete readings of all critical measurement points, individual alarm indication display, including SNMP communication					
Outlet Connections	3/8” O.D. tube fitting	3/8” Press-to-lock, 4-bank manifold with shut off valves	3/8” O.D. tube fitting		3/8” Press-to-lock, 4-bank manifold with shut off valves	3/8” O.D. tube fitting
Dimensions	12” D x 17.25” W x 27” H					
Net Weight	74 lbs					

5.5 Dryer Function Overview

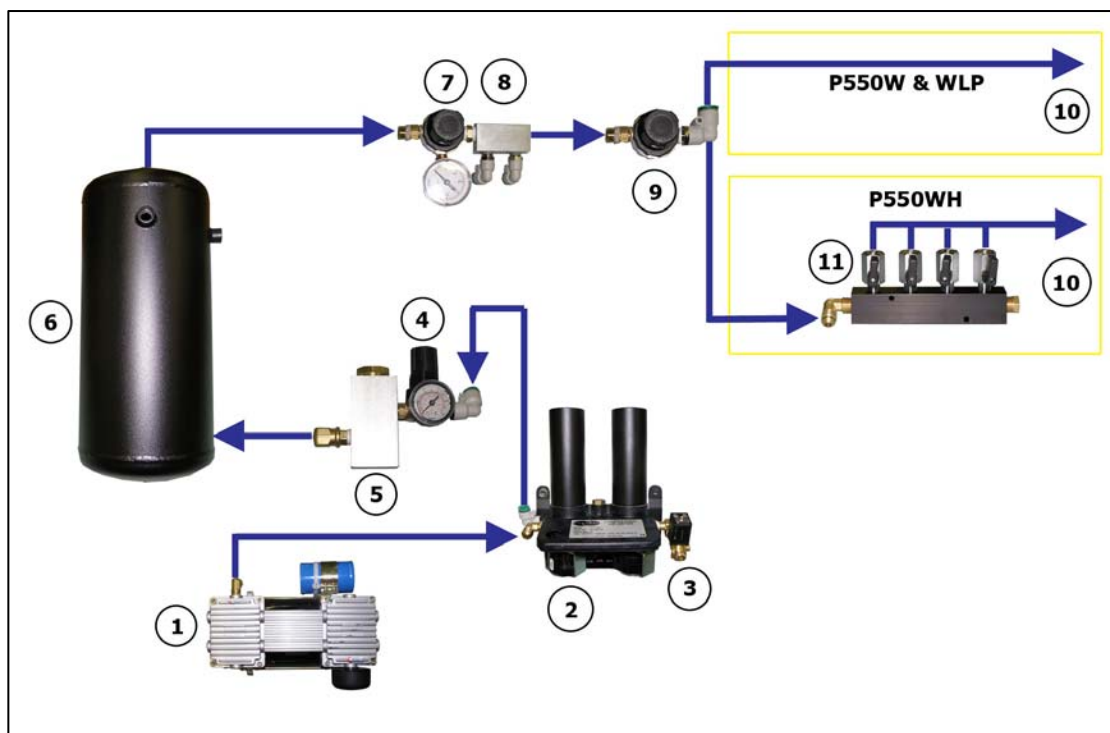

#	Component	Description
1	Compressor	Compresses drawn in ambient air.
2	Heatless Dryer	Removes moisture from compressed air.
3	Unloader Valve	Relieves excess Compressor head pressure.
4	Capacity Control Valve	Regulates System Pressure and prevents air from bleeding back through the Heatless Dryer.
5	Humidity Sensor	Measures the Humidity of the compressed air.
6	Air Tank	Stores dry compressed air.
7	Static Pressure Regulator	Regulates the Static Pressure (17 PSI). Maintains constant pressure on the Flow Block for accurate Flow measuring.
8	Flow Block	Measures the Flow of compressed air.
9	Outlet Pressure Regulator	Regulates the Outlet Pressure.
10	Pressure Outlet	Outputs the pressure set by the Outlet Pressure Regulator.
11	4-Bank Outlet Manifold	Distributes the air into 4 separate outlets.

6. Installing Your Dryer

6.1 Safety & Warning Information



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



CAUTION!

Proper Installation & Maintenance as outlined in this User's Guide is extremely important to ensure the reliability and longevity of the equipment as well as prevent damage or personal injury.



CAUTION!

Incoming power to Dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P550W models
- 208 - 253 VAC, 50/60 Hz, 1 Phase for P552W models

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is NOT RECOMMENDED AND MAY VOID THE WARRANTY.

6.2 Before You Begin

6.2.1 Carefully inspect the unit, including the shipping box as well as the air Dryer, for ANY DAMAGE CAUSED BY SHIPPING. If any shipping damage is detected, it is important to file a claim with the shipping company prior to continuing the installation procedures.

6.2.2 Read the entire *Installing Your Dryer* section to familiarize yourself with the components and procedures before performing the air Dryer installation.

6.2.3 Verify the installation location of the air Dryer:

6.2.3.1 Well ventilated and free from abrasive dust or chemicals.

6.2.3.2 Ambient temperature is between 40° and 85° F (optimal).


NOTE: Higher temperatures will decrease component lifespan.

6.2.3.3 Meets the following power requirements:

- 110 - 125 VAC for P550W, P550WH and P550WLP models
- 208 - 253 VAC, 1 Phase for P552W, P552WH and P552WLP models
- All models require 50/60 Hz and minimum 15 amp service with a 10 amp slow blow fuse

6.2.4 Notify the alarm center of the installation and potential for alarms during the process (as necessary).

6.3 Included Contents

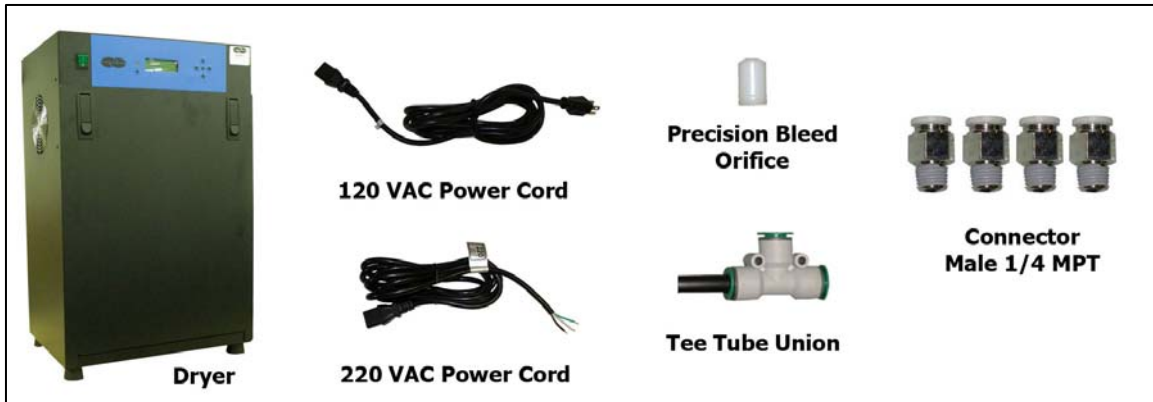

(1) P550W Series Air Dryer

(1) Installation Guide (not shown)

Package located inside the Dryer:

- (1) 120 VAC Power Cord (P550W, P550WH, P550WLP)
- (1) 220 VAC Power Cord (P552W, P552WH, P552WLP)
- (4) Connector, Male 1/4 MPT (P550WH, P552WH)
- (1) Tee Tube Union
- (1) Precision Bleed Orifice
- (1) User's Guide (not shown)
- (1) Mini CD (not shown)

6.4 Required Tools and Materials

- Medium adjustable wrench
- Cup of soapy water
- Box Cutter
- 1-inch paint brush (recommended)


6.5 Installation Steps

- 6.5.1** Using a box cutter remove the Dryer from box and all shipping materials.

NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.



- 6.5.2** Open panel latches and remove the front panel.

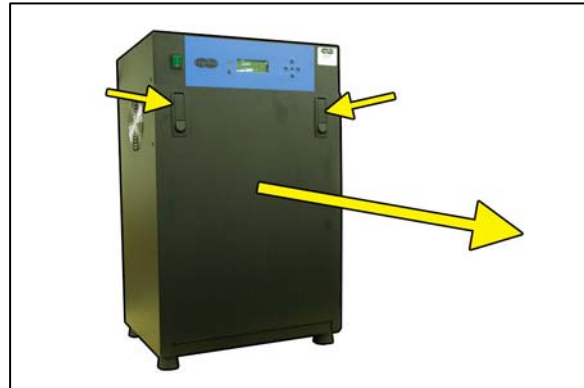


- 6.5.3** Check for loose parts, hoses, or wiring.

NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.



- 6.5.4** Remove the ship-loose contents package.

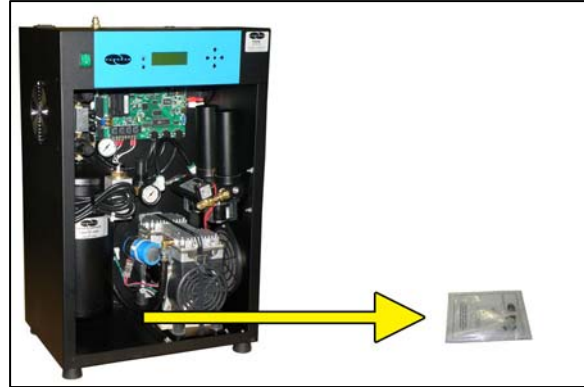


For P550WH and P552WH dryers:

- 6.5.5** Install the Outlet Port

Fittings:


- 6.5.5.1** Remove four (4) Outlet Port plugs.
- 6.5.5.2** Install four (4) Outlet Port Connectors.

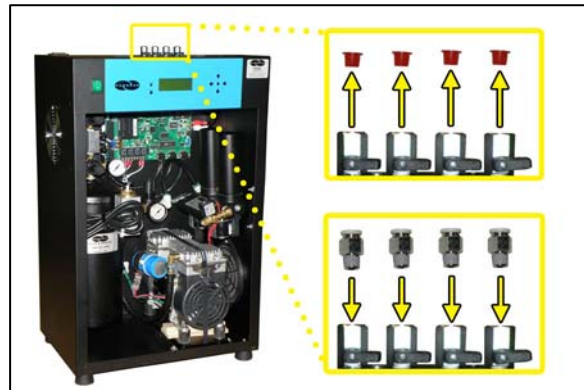

- 6.5.6** Place the Dryer at the desired operating location:


- Place the Dryer on a leveled surface
- For rack install use Universal Rack Mounting Kit P011674 (section 11.4)
- For wall install use Wall Mounting Kit P011773 (section 11.4)

- 6.5.7** Verify that the Dryer is powered **OFF**.


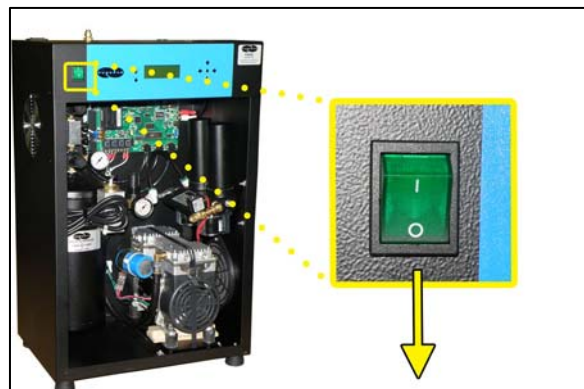


6.5.8 Plug AC Power Cord to Dryer.**6.5.9** Wire or plug the power cord into:

- 110 - 125 VAC power outlet for P550W, P550WH, and P550WLP models
- 208 - 253 VAC, 1 phase, power outlet for P552W, P552WH, and P552WLP models.
 - Line – Black (Brown)
 - Neutral – White (Blue)
 - Ground – Green (Green/Yellow)

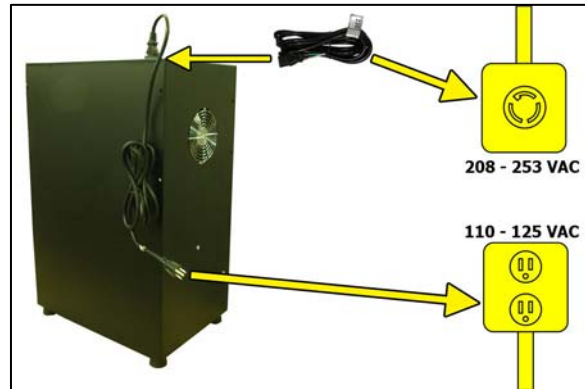
**6.5.10** Power the Dryer **ON**.

NOTE: The compressor and heatless Dryer will start, creating air flow through the Outlet Port.

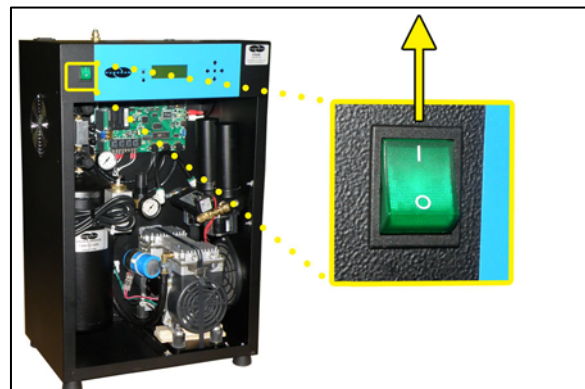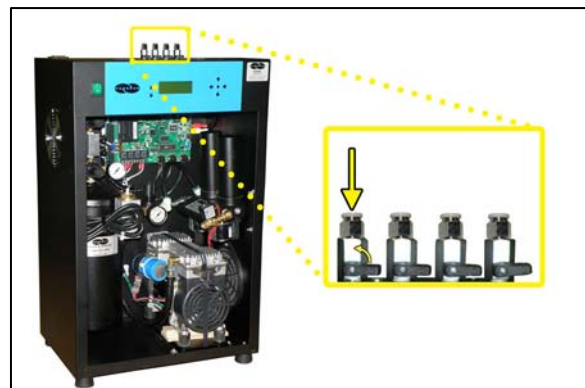
**For P550WH and P552WH dryers:****6.5.11** Open the first Outlet Port slightly to create a small amount of air flow.

6.5.12 Set the System Pressure:**With Compressor running:**

- 6.5.12.1** Pull the Capacity Control Valve knob out.

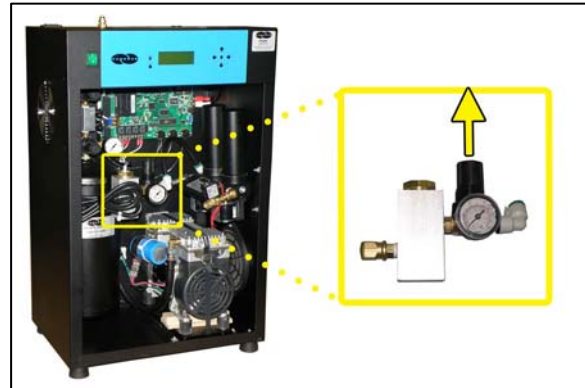


- 6.5.12.2** Turn the knob until the reading on the pressure gauge is **50 PSI**.

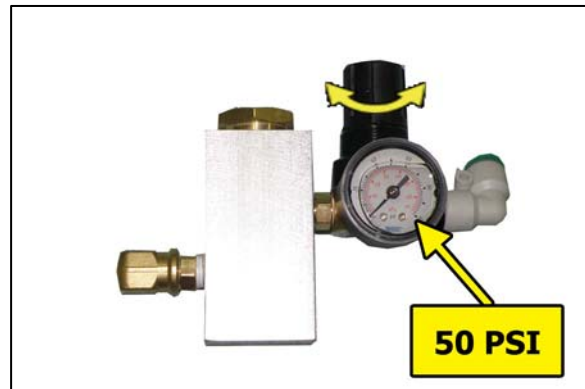


- 6.5.12.3** Push the knob in to lock.

- 6.5.13** Let the Dryer run until the Humidity drops below 2%. (may take up to 15 minutes).

NOTE: Press the **RESET** button if the Dryer goes into **SHUTDOWN** mode.

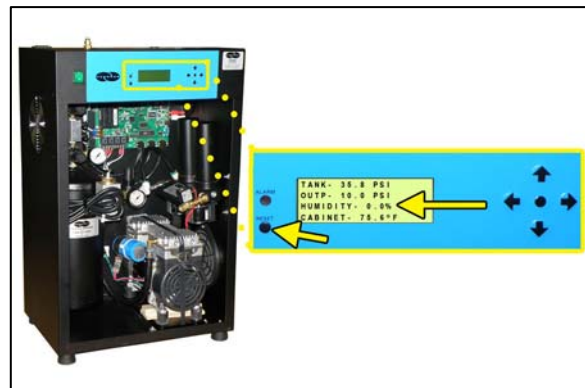


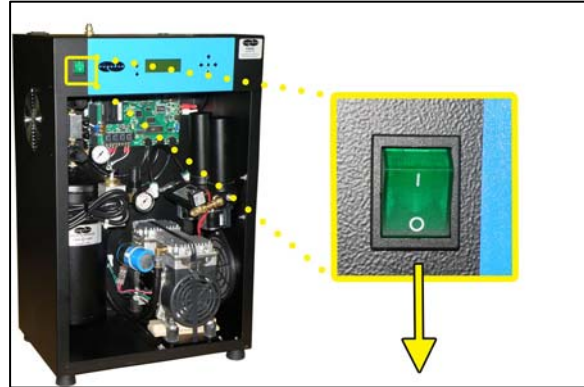6.5.14 Power the Dryer **OFF**.


For P550W, P550WLP, P552W and P552WLP dryers:

6.5.15 Remove the Precision
Bleed Orifice from the Outlet
Port.

NOTE: Save this orifice for use in
low flow applications.

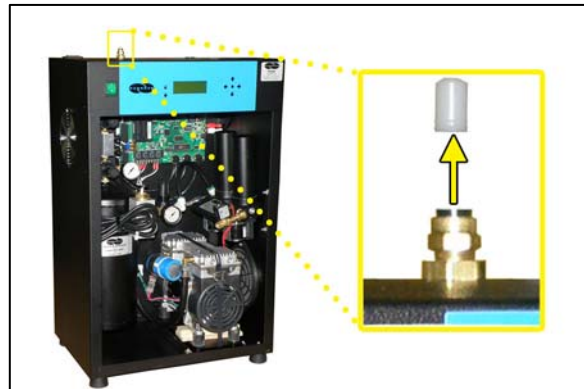**6.5.16** Connect the air supply line(s):


For P550W, P550WLP, P552W and P552WLP dryers:

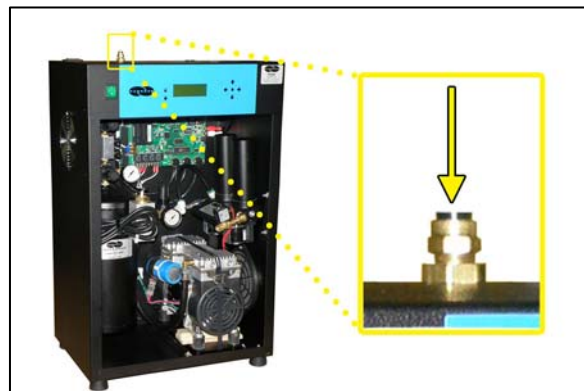6.5.16.1 Connect the air
supply line to the Outlet
Port.

For P550WH and P552WH dryers:


6.5.16.2 Connect up to four (4) air supply lines to the Dryer Outlet Ports.

Open Outlet Ports as required.

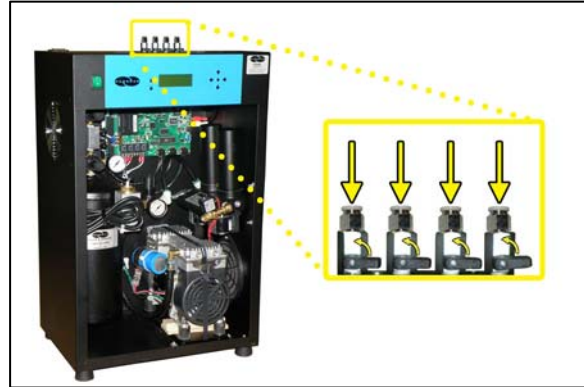
**NOTE: For all dryers with minimal flow:**

Install the Tee Tube Union and the Precision Bleed Orifice to maintain a constant air flow.

(The orifice was removed in step 6.5.15 for the W and WLP dryers or included in the ship-loose package for the WH dryers.)



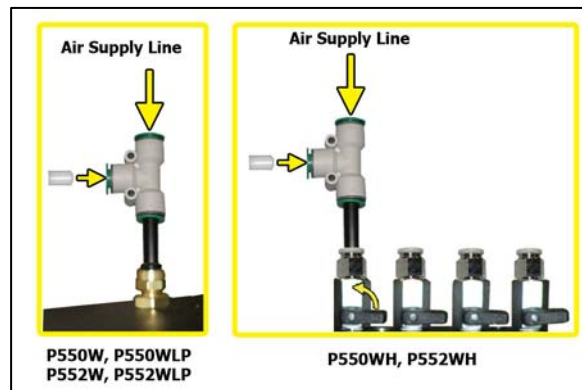


6.5.17 Power the Dryer ON.

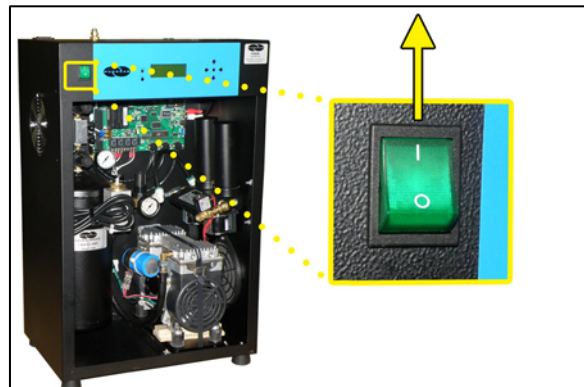


6.5.18 Set the Static Pressure:**6.5.18.1 Pull Static Pressure**

Regulator knob out.

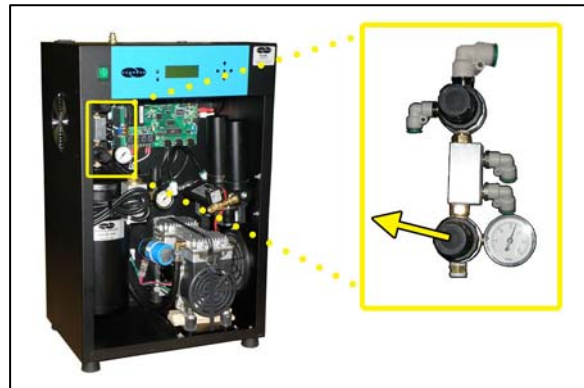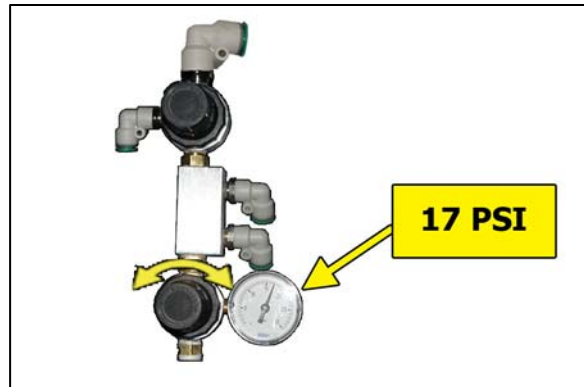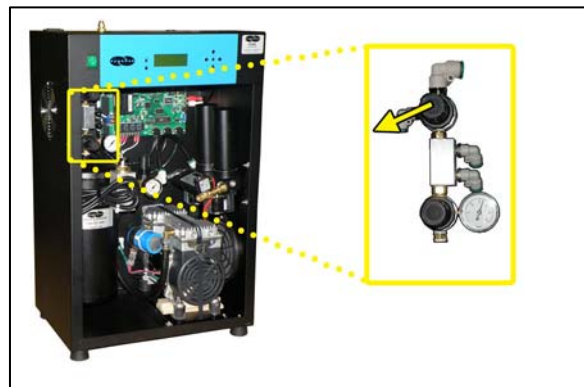**6.5.18.2 Turn knob until the reading on the pressure gauge is 17 PSI.****6.5.18.3 Push knob in to lock.****6.5.19 Set the Outlet Pressure:****6.5.19.1 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).**

6.5.19.2 Turn knob until
Outlet Pressure (**OUTP**)
reading is at the desired
setting.

6.5.19.3 Push knob in to lock
(or tighten the retaining
nut – LP Models).

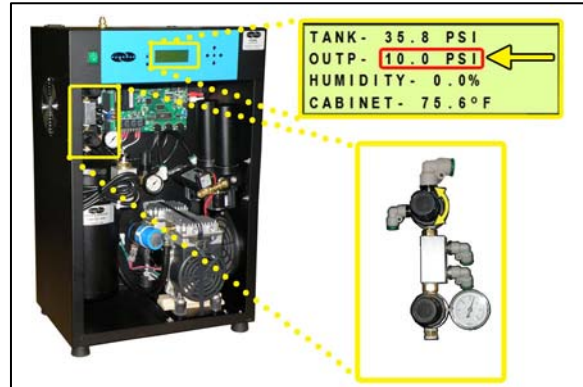

6.5.20 Check for air leaks:

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**


With Compressor NOT running:

6.5.20.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

6.5.20.2 Use a 1-inch paint
brush to dab soapy water
on the air fitting or hose
connection to be tested.

If air bubbles appear at the
connection, this indicates that
air is leaking from the
connection.

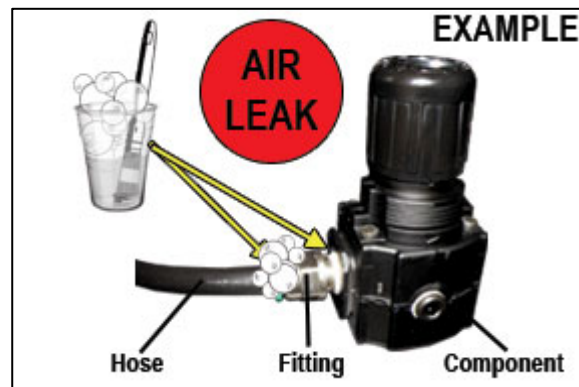

If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect the hose end*
- *Replace the fitting / hose / component*

6.5.21 Re-install the front panel.**6.5.22 REGISTER YOUR DRYER.** *See section 7. for details.***6.6 Installation Checklist**

- ☐ No shipping damage was detected.
- ☐ Dryer location meets the following requirements:
 - Well ventilated
 - Free from abrasive dust or chemicals
 - Ambient temperature is between 40° and 85° F (optimal)
- ☐ System Pressure is set to 50 PSI.
- ☐ Static Pressure is set to 17 PSI.
- ☐ No air leaks are present in the system.
- ☐ No alarms are present on the Display Panel.

7. Registering Your Dryer

Please take a moment to register your PUREGAS P550W Series Air Dryer. Registering is necessary to activate the Limited Warranty on your product. Once you register, you are eligible to receive free technical support, as well as updates concerning your PUREGAS products.

Register Online at www.puregas.com/registration

Or by Phone 1-800-521-5351 (option 2)

Have the following information available:

Model #: _____ **Serial #:** _____

Company Name: _____ **Location Name:** _____

Shipping Address: _____

City: _____ **State:** _____ **Zip Code:** _____

Contact Name: _____ **Phone #:** () - ext. _____

Email: _____

8. Operating Your Dryer

8.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.




IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is NOT RECOMMENDED AND MAY VOID THE WARRANTY.

8.2 Connecting Air Supply Lines to the Dryer


For P550W, P550WLP, P552W and P552WLP dryers:

8.2.1 Connect the air supply line
to the Outlet Pressure port.

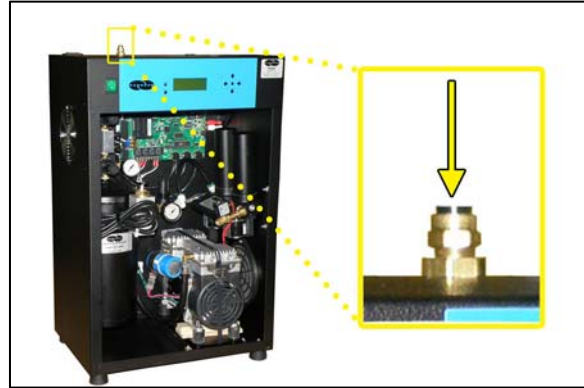

For P550WH and P552WH dryers:


8.2.2 Connect the air supply
line(s) to the Outlet Pressure
port(s).

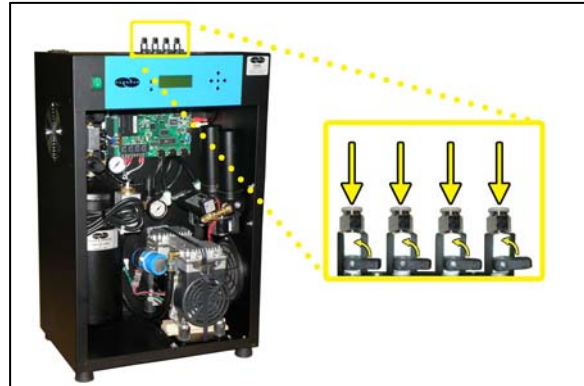

8.2.3 Open Outlet Ports as
required.

NOTE: For all dryers with minimal flow:

Install the Tee Tube Union
and the Precision Bleed
Orifice to maintain a constant
air flow.

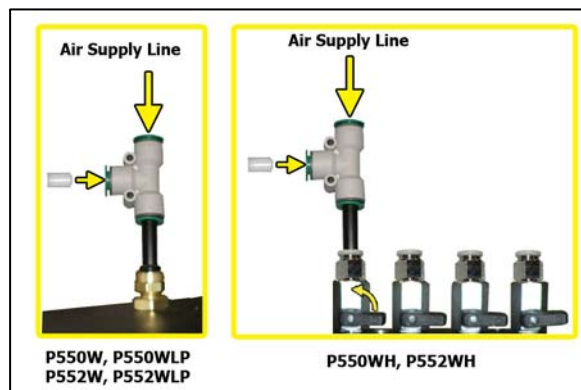


⚠ CAUTION: Be careful when removing outlet plugs or connected Air Supply Lines. System may be pressurized.

8.3 Depressurizing the Dryer

⚠ CAUTION: Be careful when removing air hose. System is pressurized.

8.3.1 Disconnect air hose from the quick disconnect connector located on top of Outlet Pressure Regulator.

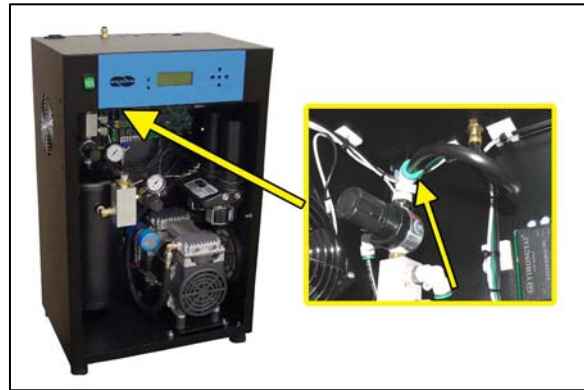

8.3.2 To prevent pressure from building back up, power the Dryer **OFF** (*See section 8.4*).

8.3.3 Reconnect air hose.

8.4 Powering the Dryer ON & OFF




CAUTION!

Incoming power to Dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P550W models
- 208 - 253 VAC, 50/60 Hz, 1 Phase for P552W models

8.4.1 POWER Switch - Controls the main power to the Dryer.

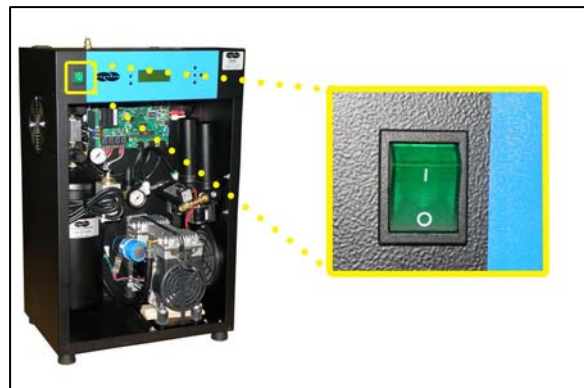


8.5 Using the Front Panel Display



CAUTION!

The Display Screen is covered by a clear protective layer that guards against Electrostatic Discharge (ESD). **DO NOT REMOVE THIS LAYER.**

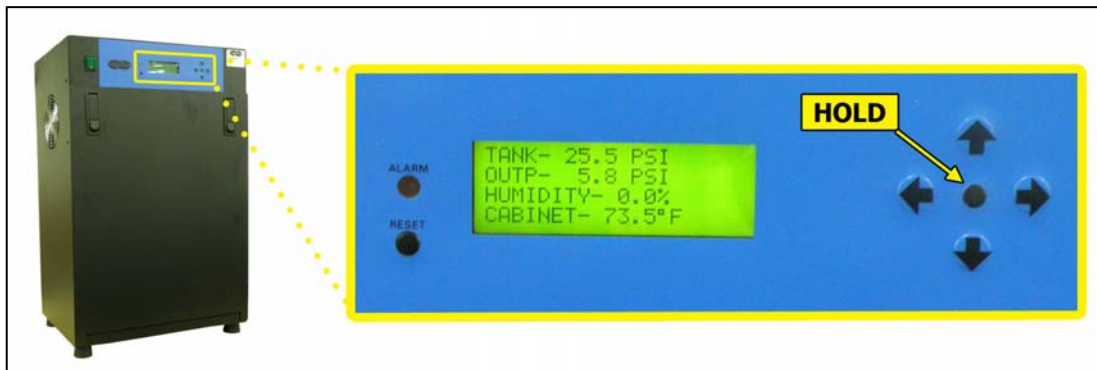

8.5.1 ALARM LED – Indicates an alarm is present.


8.5.2 RESET Button – Clears an alarm and allows the system to continue operating.

8.5.3 HOLD Button – Freezes the current information screen on the display. When pressed again, it will allow the information screens to begin cycling again.

8.5.4 Arrow Buttons – Used to access, navigate, and change values in the Set Point Adjust screens.

8.5.5 Display Screen - Shows the current Dryer readings. Will cycle between the following information screens (unless the **HOLD** button has been pressed):

8.5.5.1 Tank Screen

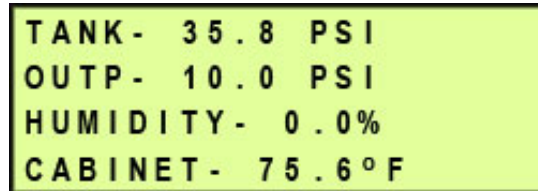

```
TANK - 35.8 PSI
OUTP - 10.0 PSI
HUMIDITY - 0.0%
CABINET - 75.6 °F
```


TANK – Air Tank pressure - fluctuates between 20 – 50 PSI.

OUTP – Outlet Pressure regulated by the Outlet Pressure Regulator

HUMIDITY – Humidity level of the system.

CABINET – Temperature of the Dryer cabinet compartment.

8.5.5.2 System Stat Screen

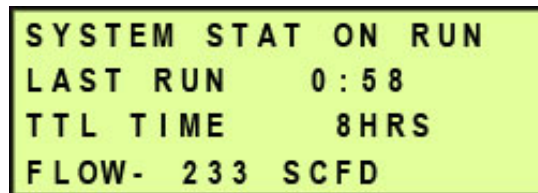

```
SYSTEM STAT ON RUN
LAST RUN    0:58
TTL TIME    8HRS
FLOW - 233 SCFD
```

SYSTEM STAT - Running Status of the system:

- **ON RUN** – System is Online.
- **SHUTDOWN** – System has been shutdown as a result of either a Humidity or High Cabinet Temperature alarm.

LAST RUN – How many minutes the compressor ran during the last Air Tank pressurization cycle.

TTL TIME – How many hours the compressor has run since the last Comp Run Reset.

FLOW – Air Flow Rate


8.6 Identifying Dryer Alarms

8.6.1 High Outlet Pressure Alarm -

Occurs when the Outlet Pressure (OUTP) rises above the alarm set point for more than one (1) minute.

(Default setting is 10.0 PSI for Standard models / 7.50 PSI for LP models)

See section 13.5 for troubleshooting information.

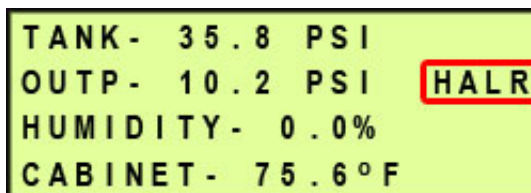


TANK -	35.8	PSI	
OUTP -	10.2	PSI	HALR
HUMIDITY -	0.0	%	
CABINET -	75.6	°F	

8.6.2 Low Outlet Pressure Alarm –

Occurs when the Outlet Pressure (OUTP) drops below the alarm set point for more than one (1) minute.

(Default setting is 2.0 PSI for Standard models / 0.30 PSI for LP models)


See section 13.7 for troubleshooting information.

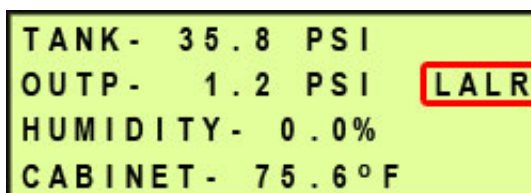

TANK -	35.8	PSI	
OUTP -	1.2	PSI	LALR
HUMIDITY -	0.0	%	
CABINET -	75.6	°F	

8.6.3 High Humidity Alarm –

Occurs when the Humidity level rises above the alarm set point for more than one (1) minute.
(Default setting is 10.0%)

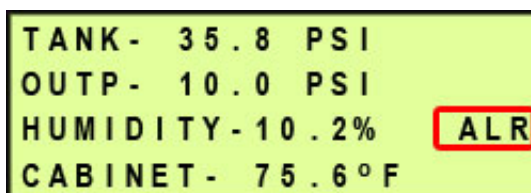

TANK -	35.8	PSI	
OUTP -	10.0	PSI	
HUMIDITY -	10.2	%	ALR
CABINET -	75.6	°F	

If this alarm is present for one (1) minute or more, the air Dryer will go into **SHUTDOWN** mode to prevent saturated air from being delivered to the supply line.

See section 13.9 for troubleshooting information.

8.6.4 High Cabinet Temperature Alarm -

Occurs when the temperature in the cabinet rises above 120°F for more than ten (10) seconds.




TANK- 35.8 PSI
OUTP- 10.0 PSI
HUMIDITY- 10.2%
CABINET- 144.1 °F **ALR**

If this alarm is present for three (3) minutes or more, the Compressor will **SHUTDOWN** to protect against damage due to overheating. Once the temperature lowers to 112°F the Compressor will re-start.

See section 13.12 for troubleshooting information.

8.6.5 High Compressor Last Run Time Alarm –

Occurs when the compressor takes longer to pressurize the air tank than the set point for the alarm. (Default setting is 3:00 minutes)

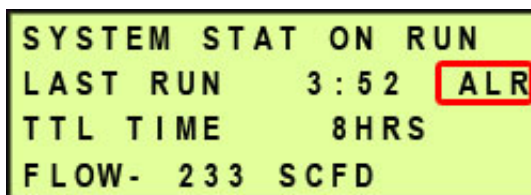


SYSTEM STAT ON RUN
LAST RUN 3:52 **ALR**
TTL TIME 8HRS
FLOW- 233 SCFD

See section 13.17 for troubleshooting information.

8.6.6 Compressor Total Hour Alarm –

Occurs when the compressor has reached an 8,000 hour maintenance interval. Perform the required maintenance.

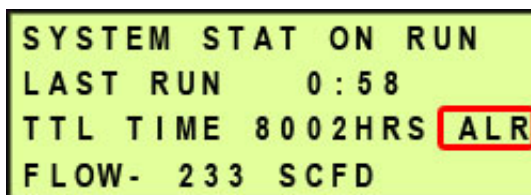


SYSTEM STAT ON RUN
LAST RUN 0:58
TTL TIME 8002HRS **ALR**
FLOW- 233 SCFD

See section 10.3 for maintenance information.

8.6.7 High Flow Rate Alarm –

Occurs when the Flow Rate (**FLOW**) rises above the alarm set point for more than one (1) minute. (Default setting is 500 SCFD)

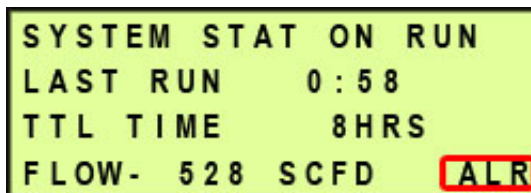

SYSTEM STAT ON RUN
LAST RUN 0:58
TTL TIME 8HRS
FLOW- 528 SCFD **ALR**

See section 13.11 for troubleshooting information.

8.7 Adjusting & Resetting Dryer Set Points

Dryer Set Points are simply limits programmed for a specific reading. Once this limit is reached (or exceeded) this results in an alarm for that reading. Each of these set points is factory programmed with a default value based on typical usage of the air Dryer. Many of the set points for Dryer alarms can be modified to levels more closely based upon your specific application.


NOTE: Reference Appendix Section 14.2 for Limits and Defaults.

- Press the Up (↑) Arrow Button to access the Set Point Adjust screens.
- Press the Up (↑) & Down (↓) Arrow Buttons to navigate through the available Set Point Adjust screens.
- To change a specific Set Point:

8.7.1 High Flow Rate Alarm Set Point (default setting is 500 SCFD) –


8.7.1.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

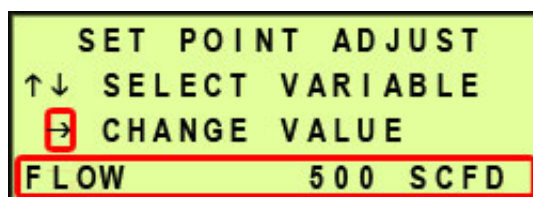

8.7.1.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

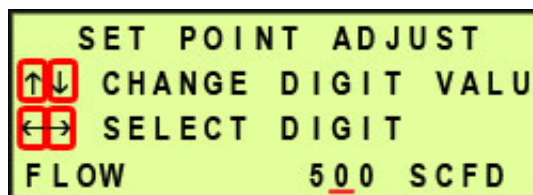


8.7.1.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.7.1.4 Press the Right (→) Arrow Button until the underscore disappears.

8.7.1.5 Press the Right (→) Arrow Button until the

underscore appears under the correct setting (YES or NO).

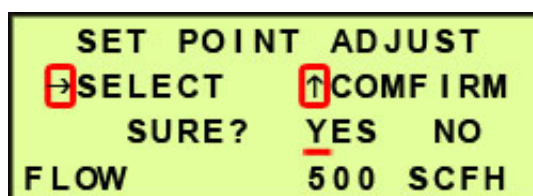


8.7.1.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.2 High Outlet Pressure Alarm Set Point


(default setting is 10.0 PSI for Standard models / 7.50 PSI for LP models) –

8.7.2.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

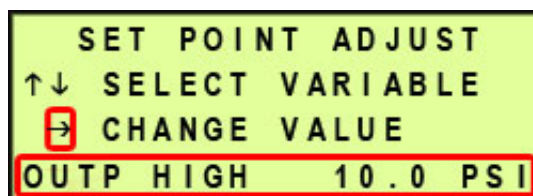


8.7.2.2 Press the Right (→) & Left (←) Arrow Buttons to move the underscore beneath the digit to change.

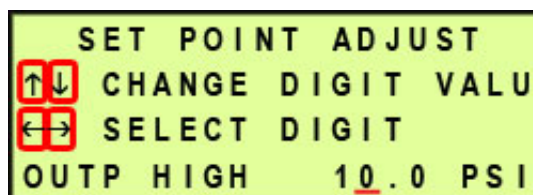

8.7.2.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.7.2.4 Press the Right (→) Arrow Button until the underscore disappears.

8.7.2.5 Press the Right (→) Arrow Button until the underscore appears under the correct setting (YES or NO).

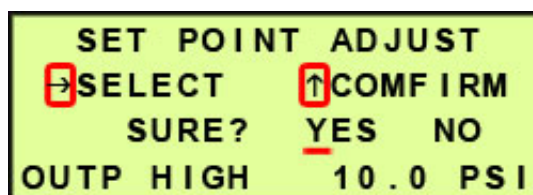


8.7.2.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.3 Low Outlet Pressure Alarm Set Point

(default setting is 2.0 PSI for Standard models / 0.30 PSI for LP models) –


8.7.3.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

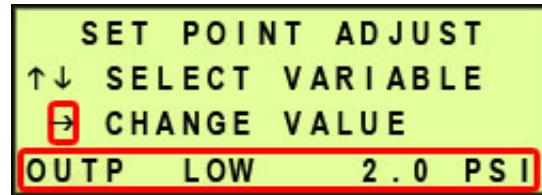

8.7.3.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

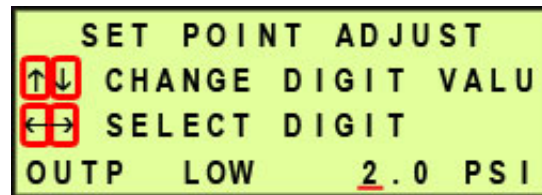


8.7.3.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.7.3.4 Press the Right (→) Arrow Button until the underscore disappears.

8.7.3.5 Press the Right (→) Arrow Button until the


underscore appears under the correct setting (YES or NO).

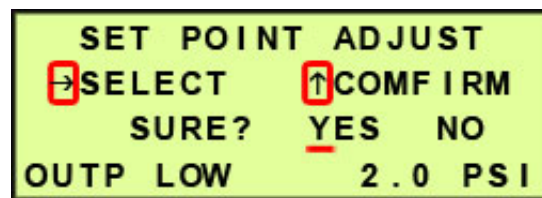


8.7.3.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.4 High Humidity Alarm Set Point (default setting is 10.0%) –**8.7.4.1** Press the Right (→)


Arrow Button to access the
Change Value Screen.

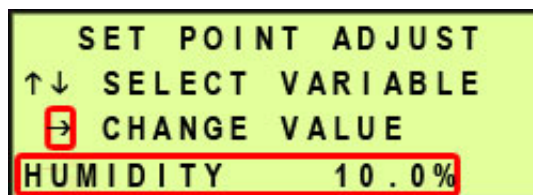**8.7.4.2** Press the Right (→) &

Left (←) Arrow Buttons to
move the underscore
beneath the digit to change.

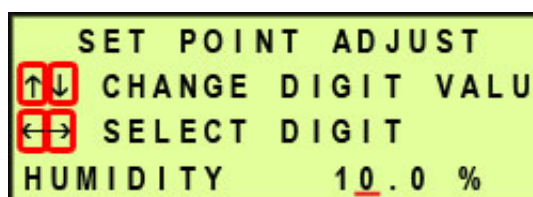**8.7.4.3** Press the Up (↑) & Down (↓) Arrow Buttons to change the value of
the selected digit.**8.7.4.4** Press the Right (→) Arrow Button until the underscore disappears.**8.7.4.5** Press the Right (→)


Arrow Button until the
underscore appears under
the correct setting (YES or
NO).

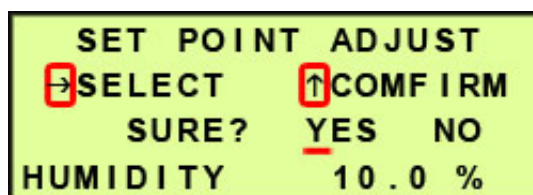**8.7.4.6** Press the Up (↑) Arrow to confirm. This will lock in the new setting
value.

8.7.5 High Compressor Last Run Time Alarm Set Point (default setting is 3:00 minutes) –


8.7.5.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

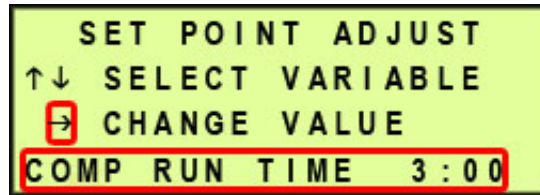

8.7.5.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

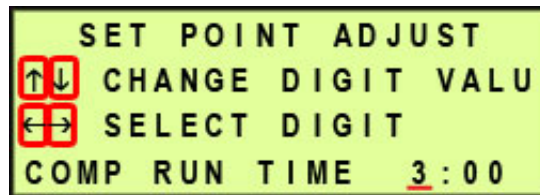


8.7.5.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.7.5.4 Press the Right (→) Arrow Button until the underscore disappears.

8.7.5.5 Press the Right (→) Arrow Button until the

underscore appears under the correct setting (YES or NO).

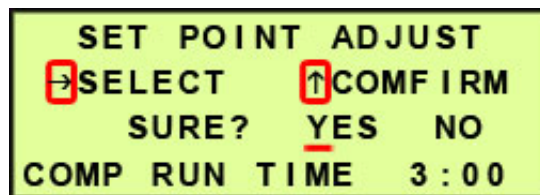

8.7.5.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.6 Compressor Total Time Reset –


The Total Time (**TTL TIME**) is the time the compressor runs measured in hours since startup or the last time the compressor time counter was reset.

The dryer will display an alarm when this counter has reached 8,000 hours, signaling is it time for maintenance.

8.7.6.1 Press and Hold the Left

(←) & Right (→) Arrow

Buttons to access the
Change Value Screen.

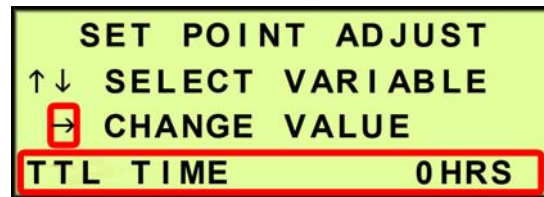


8.7.6.2 Press the Right (→) &

Left (←) Arrow Buttons to
move the underscore

beneath the digits to

change to zero (0).

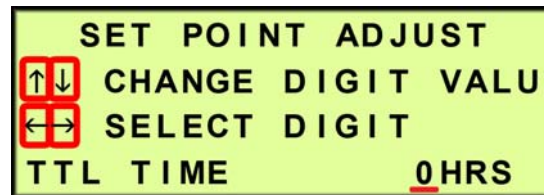


8.7.6.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.7.6.4 Press the Right (→) Arrow Button until the confirmation screen appears.

8.7.6.5 Press the Right (→)


Arrow Button until the
underscore appears under
the correct setting (**YES** or
NO).

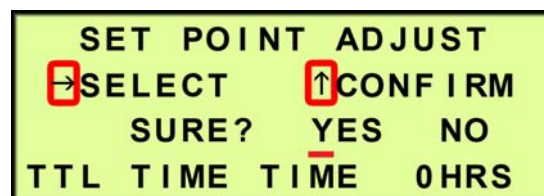


8.7.6.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.7 Reset to Factory Values –

8.7.7.1 Press the Left (←) & Right (→) Arrow Buttons at the same time.

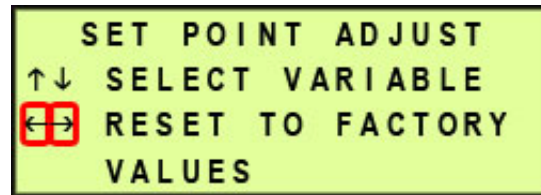

8.7.7.2 Press the Right (→) Arrow Button until the underscore appears under the correct setting (YES or NO).

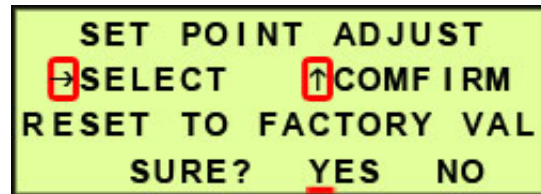

8.7.7.3 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.


8.7.8 Alarm Delays Set Point -

The Alarm Delay allows the Dryer to come out of the alarm condition on its own without signaling an alarm.


ON (default) – waits one (1) minute before signaling alarms

OFF – signals alarms immediately

8.7.8.1 Press the Right (→) Arrow Button to change the value.

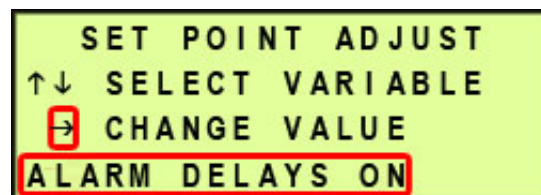

8.7.8.2 Press the Right (→) Arrow Button until the underscore appears under the correct setting (OFF or ON).

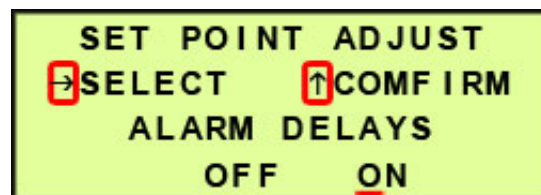


8.7.8.3 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.7.9 Startup Delay Set Point (default setting is 0 sec) –


The Startup Delay keeps the compressor from turning on immediately when the dryer is powered on for up to 10 seconds. This allows multiple dryers to power on in separate intervals in case of a power loss.

8.7.9.1 Press the Right (→)


Arrow Button to access the Change Value Screen.

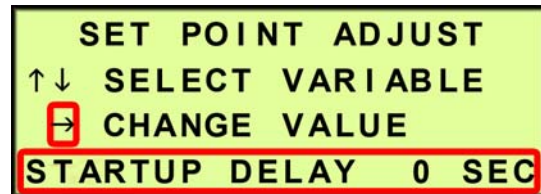**8.7.9.2** Press the Right (→) &


Left (←) Arrow Buttons to move the underscore beneath the digit to change.

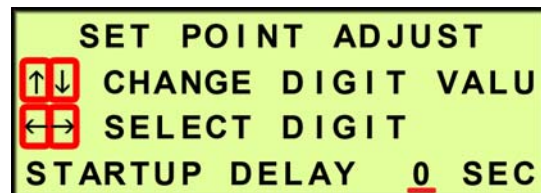**8.7.9.3** Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.**8.7.9.4** Press the Right (→) Arrow Button until the underscore disappears.**8.7.9.5** Press the Right (→)

Arrow Button until the underscore appears under the correct setting (YES or NO).

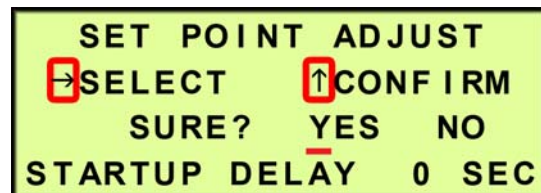**8.7.9.6** Press the Up (↑) Arrow to confirm. This will lock in the new setting value.**8.7.10 Pressure Gauge** –

This is an information screen only and will not time-out, returning to the cycling information screens. It also masks air Dryer alarms while in use. This screen can be used during air Dryer troubleshooting.

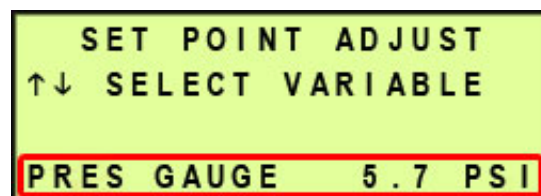

8.8 Open Panel

- 8.8.1** Open panel latches and remove the front panel.




8.9 Setting the System Pressure

With Compressor running:

- 8.9.1** Open Panel (see section 8.8).


- 8.9.2** Pull the Capacity Control Valve knob out.

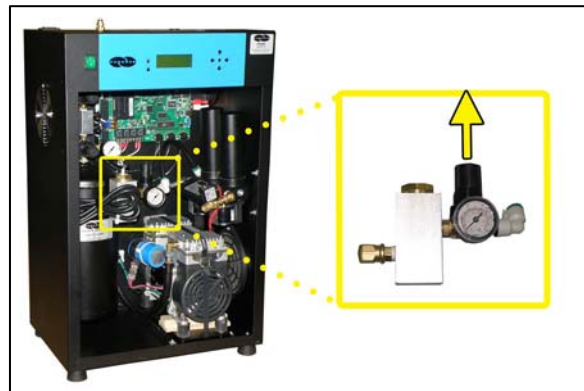

- 8.9.3** Turn the knob until the reading on the Pressure Gauge is **50 PSI**.

- 8.9.4** Push the knob in to lock.


- 8.9.5** Close Panel.

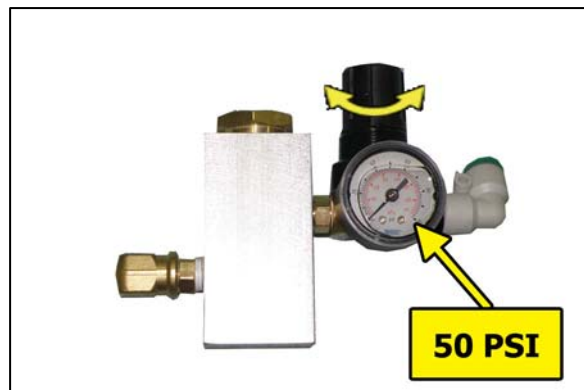

8.10 Setting the Static Pressure

8.10.1 Open Panel (see section 8.8).


8.10.2 Pull the Static Pressure Regulator knob out.

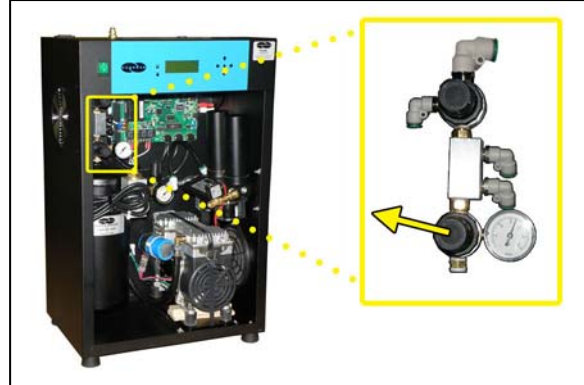

8.10.3 Turn knob until the reading on the Pressure Gauge is **17 PSI**.

8.10.4 Push knob in to lock.

8.10.5 Close Panel.

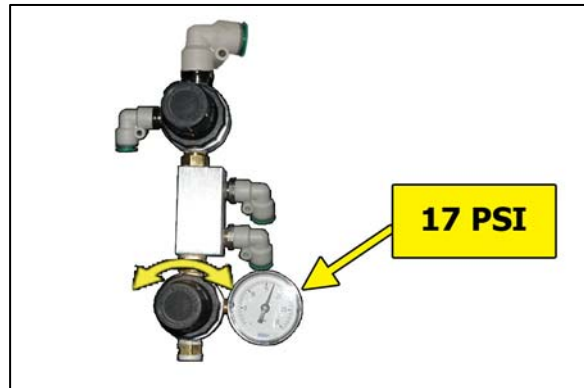

8.11 Setting the Outlet Pressure

8.11.1 Open Panel (see section 8.8).

8.11.2 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).



8.11.3 Turn knob until Outlet Pressure (**OUTP**) reading is at the desired setting.

8.11.4 Push knob in to lock (or tighten the retaining nut – LP Models).


8.11.5 Close Panel.



8.12 Connecting to Common Alarm Terminals

8.12.1 Open Panel (see section 8.8).


8.12.2 Locate the external Common Alarm pins on the Control Board.

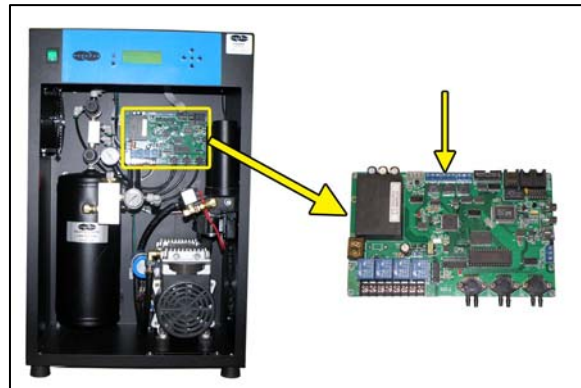

8.12.3 Wire the Common Alarm wire pair to the Control Board as required:

- **COMMON & NO** for CLOSE ON ALARM operation.
- **NC & COMMON** for OPEN ON ALARM operation.


8.12.4 Close Panel.

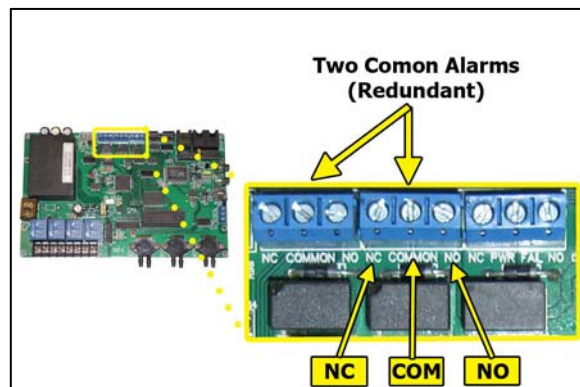

8.13 Connecting to Power Fail Alarm Terminals


8.13.1 Open Panel (see section 8.8).

8.13.2 Locate the external Power Fail pins on the Control Board.

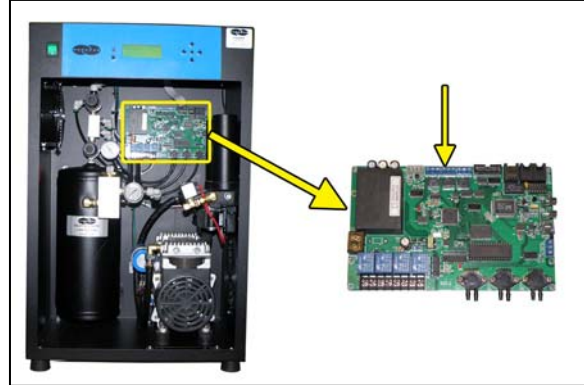

8.13.3 Wire the Power Fail Alarm wire pair to the Control Board as required:

- **PWR FAIL & NO** for CLOSE ON ALARM operation.
- **NC & PWR FAIL** for OPEN ON ALARM operation

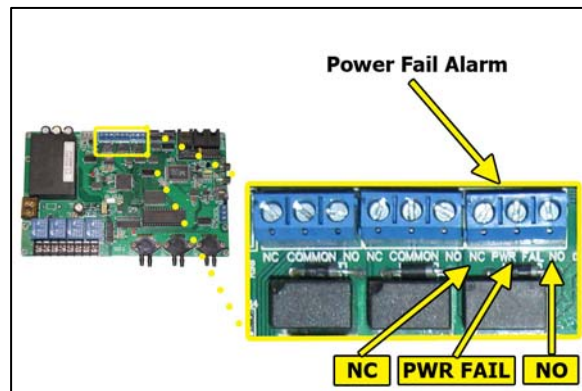

8.13.4 Close Panel.

8.14 Connecting via Web Browser


If the Air Dryer IS connected to an IP network:

- The Air Dryer must be configured with a valid IP Address, Subnet Mask, and Gateway Address for the network.
- An IP cable is connecting the Air Dryer to the network.
- Use a computer that is on the same network as the air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.

If the Air Dryer IS NOT connected to an IP network and has not been configured with IP information:

- Use the default IP Address (*192.168.1.100*) of the air dryer to connect.
- Use an IP Cable (may require Cross-over cable) plugged directly into a Laptop/PC and the other end plugged into the UTP Port on the control board of the Air Dryer.
- Configure the network card on the Laptop/PC to use the IP Address *192.168.1.101*. This will make the Laptop/PC compatible with the Air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.


8.14.1 Type the IP Address of the P550W Series air Dryer in the Address text box of the web browser.

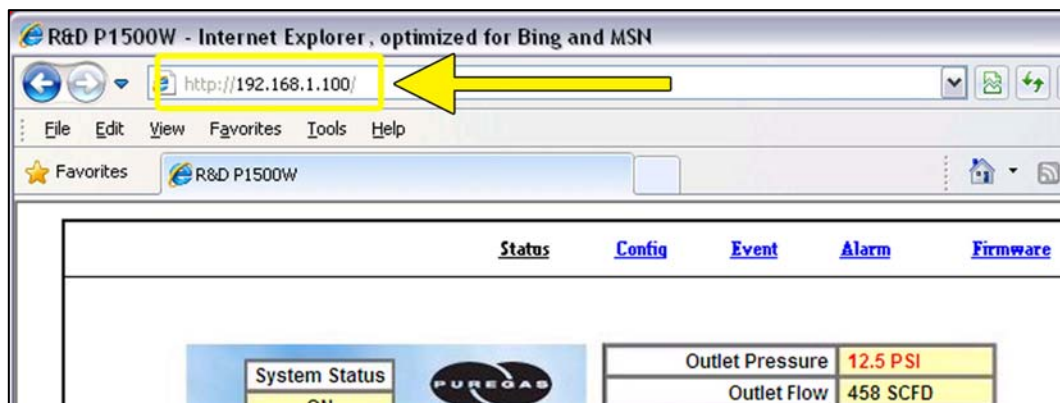

The Web Browser connection offers five (5) screens to the user:

- **Status Screen** - Displays the readings and alarms monitored in the P550W Series Air Dryer. Provides remote ALARM RESET.
- **Config Screen** - All configurations of Set Points, Setups, and Keyword can be made in this screen.
- **Event Screen** - Displays all events such as alarms, changes made, and alarm resets registered by the P550W Series Air Dryer. This screen is informational only.
- **Alarm Screen** - Displays all the Alarms registered by the P550W Series Air Dryer. This screen is informational only.
- **Firmware Screen** – Allows the user to upload any software updates or upgrades to the Air Dryer.


8.14.2 Click on the Menu Bar selection to access a specific screen.

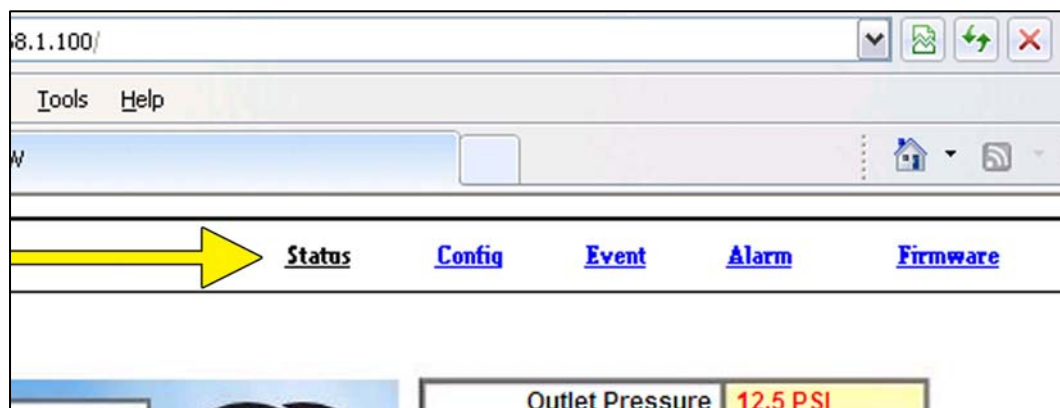


8.15 Using the Status Screen

Displays the readings and alarms monitored in the P550W Series Air Dryer.

Provides remote ALARM RESET.

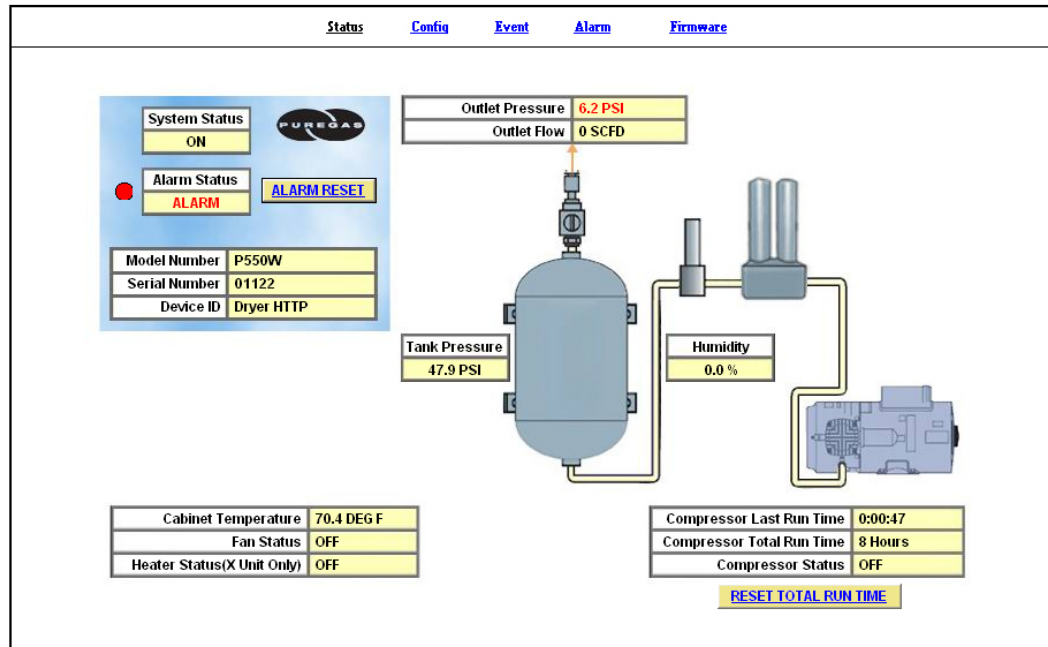


- Readings are displayed in **BLACK** unless an alarm is present.
- Alarms are displayed in **RED** next to the parameter in alarm.

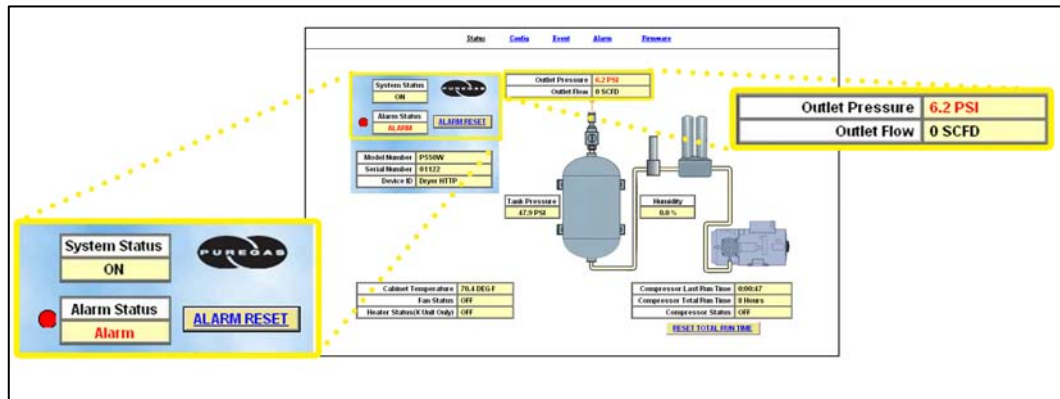


- Alarm Status will display **Alarm** in red if any alarms are present.
- Keyword validation is required for ALARM RESET and RESET TOTAL RUN TIME.

8.15.1 Resetting an Alarm

8.15.1.1 Click on the **ALARM RESET** Button to remotely reset Air Dryer alarms displayed on Status Screen.

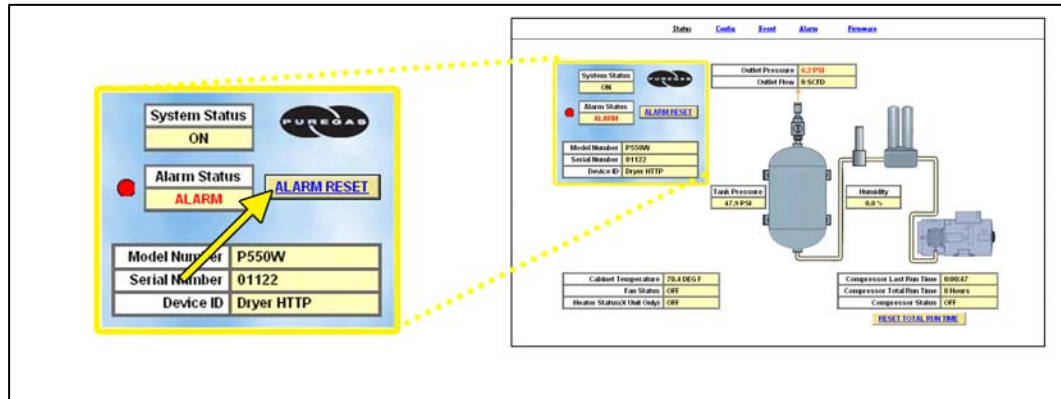


8.15.1.2 Enter Keyword (default is 123456)

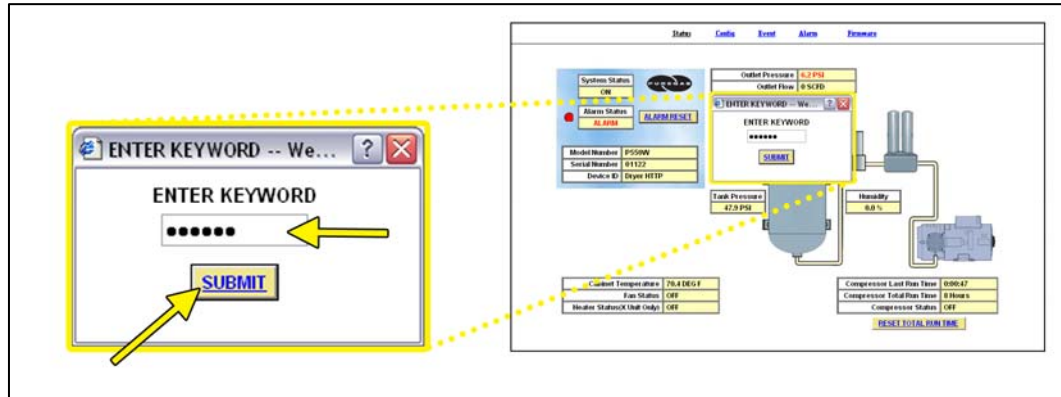


8.15.1.3 Click on **SUBMIT** Button when done.

8.15.2 Resetting Compressor Total Run Time

8.15.2.1 Click on the **RESET TOTAL RUN TIME** Button to remotely reset Compressor Total Run Time displayed on Status Screen.

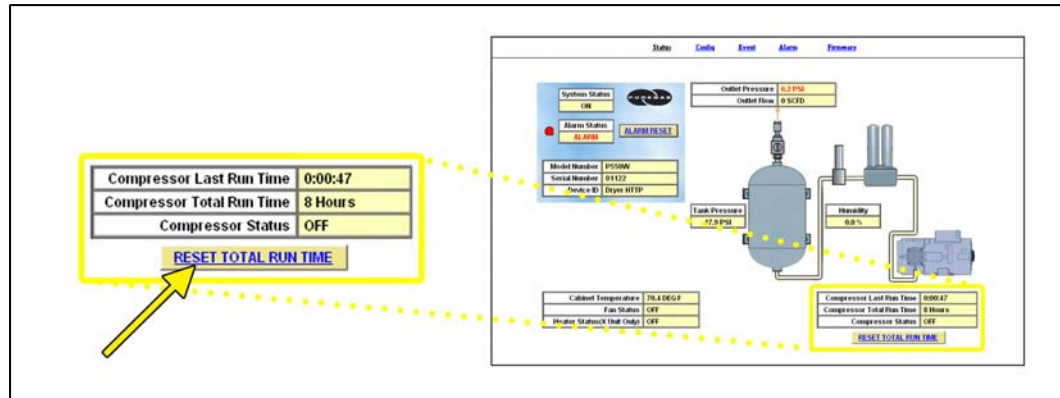

8.15.2.2 Enter Keyword (default is 123456)

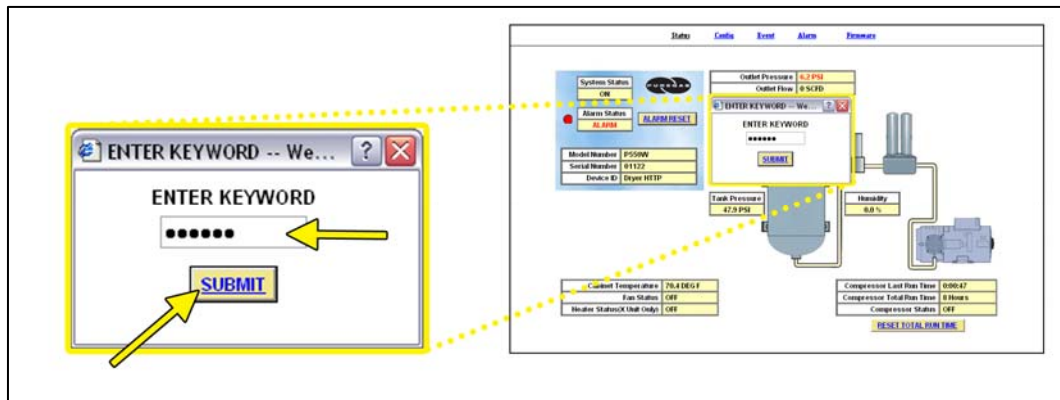

8.15.2.3 Click on **SUBMIT** Button when done.

8.16 Using the Config Screen

All configuration of Set Points, Setups, and Keyword can be made in this screen.

NOTE: Reference Appendix section 14.2 for Limits, Defaults, and Formats.

The screenshot shows the 'Config' tab selected in a navigation bar with 'Status', 'Config', 'Event', 'Alarm', and 'Firmware' options. The main content area is divided into three sections: 'SYSTEM SETUP', 'ALARM SETUP', and 'NETWORK SETUP'. Each section contains a table of configuration parameters. In the 'SYSTEM SETUP' table, the 'START UP DELAY' is set to 0 seconds. The 'ALARM SETUP' table lists five alarm types with their set points and units: HIGH FLOW (500 SCFD), HIGH OUTLET PRESSURE (8.0 PSI), LOW OUTLET PRESSURE (3.0 PSI), HIGH HUMIDITY (10.0 %), and LAST RUN TIME (3:00 Minutes). The 'NETWORK SETUP' table shows IP address (192.168.1.100), subnet mask (255.255.255.0), gateway address (0.0.0.0), SNMP trap server address (0.0.0.0), current date/time (02/01/12 13:37), and device ID. At the bottom, there are two buttons: 'ACCEPT' and 'CHANGE KEYWORD'. Values in blue text indicate the current settings.

SYSTEM SETUP		
Description	Set Point	Unit
START UP DELAY	0	SECONDS

ALARM DELAY: ☐ ON ☒ OFF

ALARM SETUP		
Description	Set Point	Unit
HIGH FLOW	500	SCFD
HIGH OUTLET PRESSURE	8.0	PSI
LOW OUTLET PRESSURE	3.0	PSI
HIGH HUMIDITY	10.0	%
LAST RUN TIME	3:00	Minutes

NETWORK SETUP	
IP ADDRESS	192.168.1.100
SUBNET MASK	255.255.255.0
GATEWAY ADDRESS	0.0.0.0
SNMP TRAP SERVER ADDRESS	0.0.0.0
CURRENT DATE/TIME	02/01/12 13:37
DEVICE ID	


ACCEPT CHANGE KEYWORD

- Values in **BLUE** represent the current setting.
- The **ACCEPT** Button is used to change values.
- The **CHANGE KEYWORD** Button allows you to configure a new Keyword.
- Keyword validation is required for the following:
 - Changing a Set Point value
 - Changing the Keyword

8.16.1 Changing a Set Point or Setup value:


8.16.1.1 Click on the value to change.

8.16.1.2 Type in the new value.

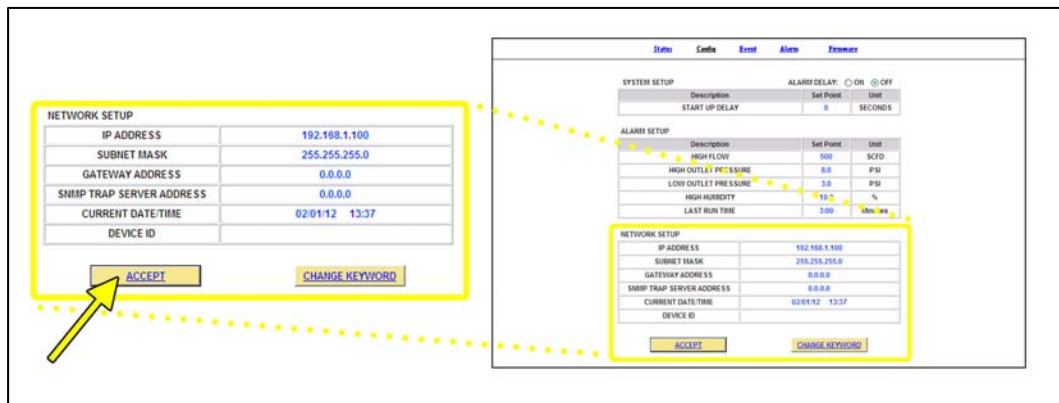

8.16.1.3 Click the **ACCEPT** Button when done.


8.16.1.4 Enter Keyword (default is 123456)

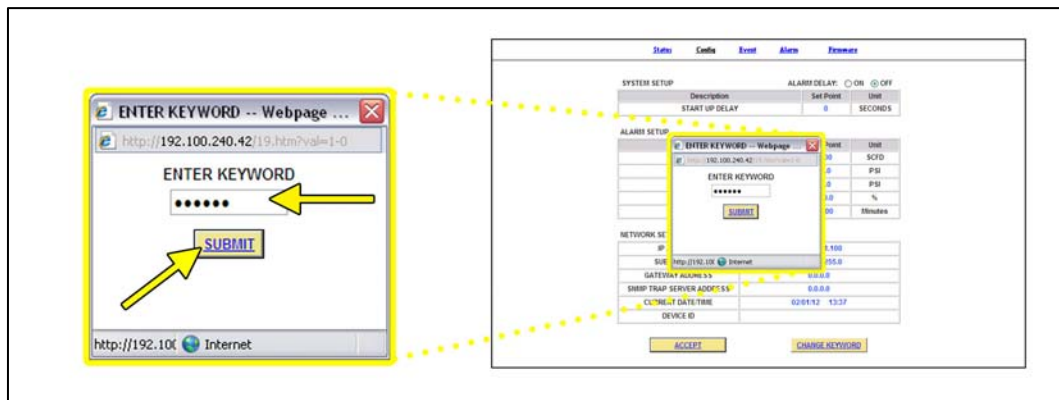

8.16.1.5 Click on **SUBMIT** Button when done. This will lock in the new setting value.

8.16.2 Changing the Keyword


8.16.2.1 Click on **CHANGE KEYWORD** Button to change the keyword.

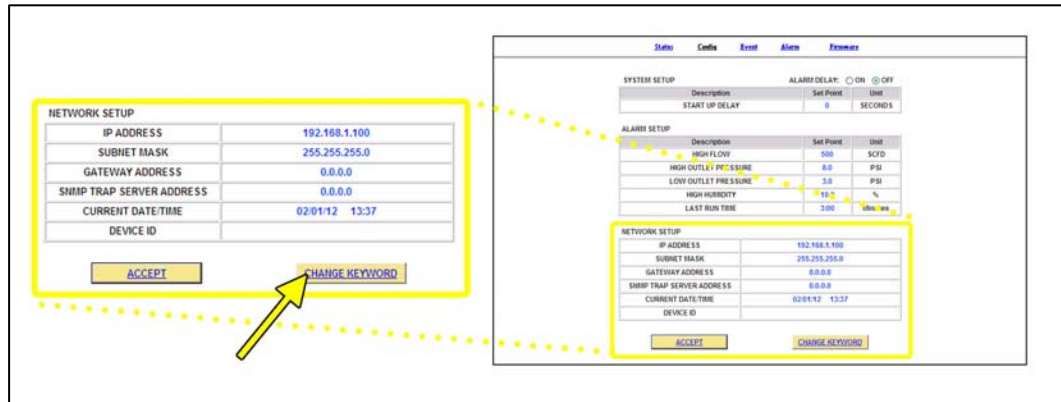

8.16.2.2 Type the Old Keyword.

8.16.2.3 Type the New Keyword.

8.16.2.4 Type the Confirm New Keyword.

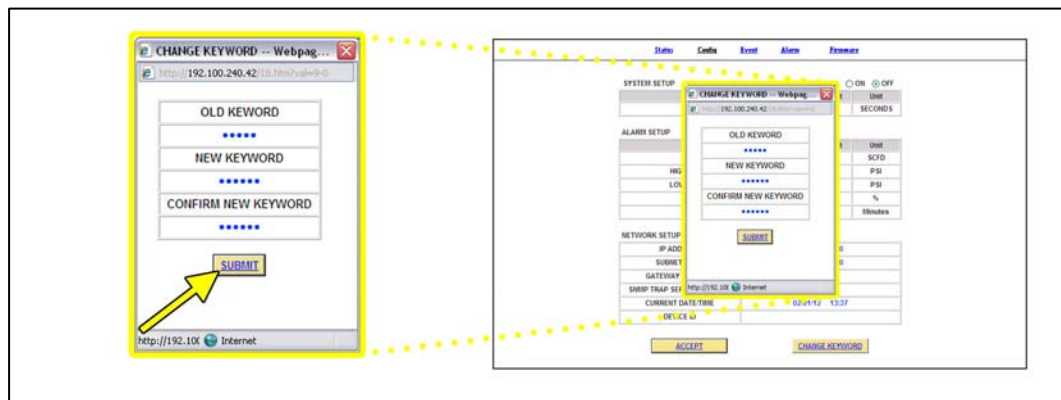





8.16.2.5 Click on **SUBMIT** Button to confirm. This will lock in the new setting value.

8.17 Using the Event Screen

Displays all events such as alarms, changes made, and alarm resets registered by the P550W Series Air Dryers. This screen is informational only.

Status Config Event Alarm						
No.	Event	Description	Remark	Date	Time	
1	Alarm reset		SRC:Key	01/27/2011	08:32:42	
2	Alarm reset		SRC:Key	01/27/2011	08:31:47	
3	Alarm reset		SRC:Key	01/27/2011	08:29:40	
4	Alarm reset		SRC:Key	01/27/2011	08:27:41	
5	Alarm reset		SRC:Key	01/27/2011	08:16:44	
6	Alarm reset		SRC:Key	01/27/2011	08:14:10	
7	Alarm reset		SRC:Key	01/27/2011	08:12:53	
8	Alarm reset		SRC:Key	01/27/2011	08:11:44	
9	Alarm reset		SRC:Key	01/27/2011	08:10:38	
10	Alarm reset		SRC:Key	01/27/2011	08:09:32	
11	Alarm reset		SRC:Key	01/27/2011	08:08:12	
12	Alarm reset		SRC:Key	01/27/2011	08:08:06	
13	Alarm reset		SRC:Key	01/27/2011	08:05:55	
14	Alarm reset		SRC:IE	01/27/2011	07:44:30	
15	Device Restart		DownLoad	01/26/2011	16:21:17	
16	Device Restart		DownLoad	01/26/2011	16:20:17	
17	Device Restart		Power up	01/25/2011	13:47:55	

 



1 of 1

- Click on the column headings to sort data according to that column.
- Click the Arrow Buttons to navigate through all the event log pages.

8.18 Using the Alarm Screen

Displays all the Alarms registered by the P550W Series Air Dryers. This screen is informational only.

Status Config Event Alarm Firmware				
No.	Description	Alarm Read	Date ▾	Time ▾
1	High Outlet Pressure Reading	6.23	04/04/2011	12:49:59
2	High Flow Reading	53.6	04/01/2011	16:39:17
3	Excessive Compressor Run Time Alarm	ALARM	04/01/2011	16:34:01
4	Low Outlet Pressure Reading	0.00	04/01/2011	16:34:00
5	High Cabinet Temperature Reading	132.1	04/01/2011	16:33:11
6	Low Outlet Pressure Reading	0.00	04/01/2011	16:31:43
7	Low Outlet Pressure Reading	0.00	04/01/2011	16:30:37
8	High Humidity Reading	14.39	04/01/2011	16:29:25
9	Low Outlet Pressure Reading	0.00	04/01/2011	16:28:14
10	High Cabinet Temperature Reading	128.2	04/01/2011	16:23:08
11	Low Outlet Pressure Reading	0.00	04/01/2011	16:22:43
12	High Outlet Pressure Reading	13.64	04/01/2011	16:19:44
13	Low Outlet Pressure Reading	0.00	04/01/2011	16:18:24
14	Low Outlet Pressure Reading	0.00	04/01/2011	16:17:15
15	High Outlet Pressure Reading	6.56	04/01/2011	16:13:14
16	Low Outlet Pressure Reading	0.00	03/30/2011	09:57:34
17	Low Outlet Pressure Reading	0.00	03/30/2011	09:05:06
18	Low Outlet Pressure Reading	0.00	03/29/2011	15:07:54





1 of 12

- Click on the column headings to sort data according to that column.
- Click the Arrow Buttons to navigate through all the event log pages.

8.19 Using the Firmware Screen

Displays the current firmware version and date of the P550W Series Air Dryers.

The screenshot shows a web-based interface for the P550W Series Air Dryers. At the top, there is a navigation bar with five tabs: [Status](#), [Config](#), [Event](#), [Alarm](#), and [Firmware](#). The [Firmware](#) tab is currently selected. Below the navigation bar, the main content area displays the following information:


Current Version:	Puregas New P550W Dryer Device, Version 2.79 31 Mar 11	
New Version File:		Browse...

Below the table, there is a yellow button labeled **ACCEPT**.

- **Current Version:** Displays the current firmware version of the P550W Air Dryer.
- **New Version File:** Displays the new location and new firmware version chosen.
- The **BROWSE** Button allows you to locate the new firmware file.
- The **ACCEPT** Button is used to change values.
- Keyword validation is required to update firmware.

8.19.1 Updating the Firmware:


8.19.1.1 Click on **BROWSE** Button to locate the firmware file.

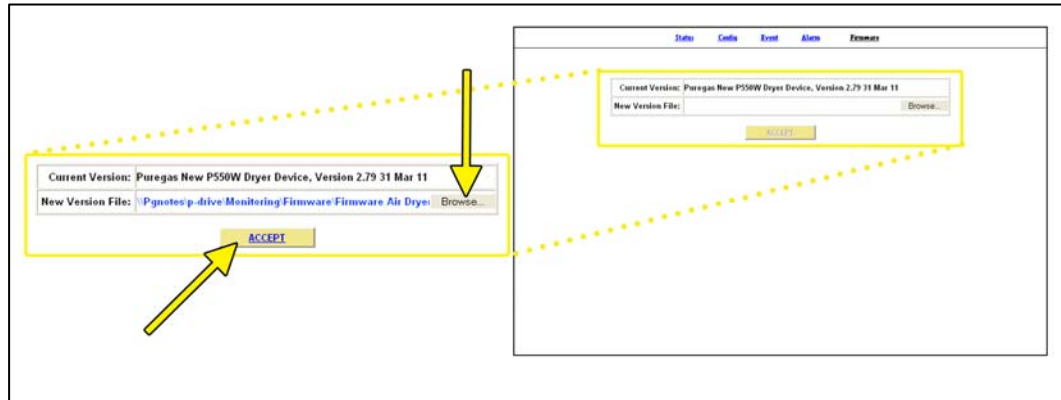

8.19.1.2 Navigate and Select the correct .bin file. Press the **OK** Button.

8.19.1.3 Click the **ACCEPT** Button when done

8.19.1.4 Enter Keyword (default is 123456)

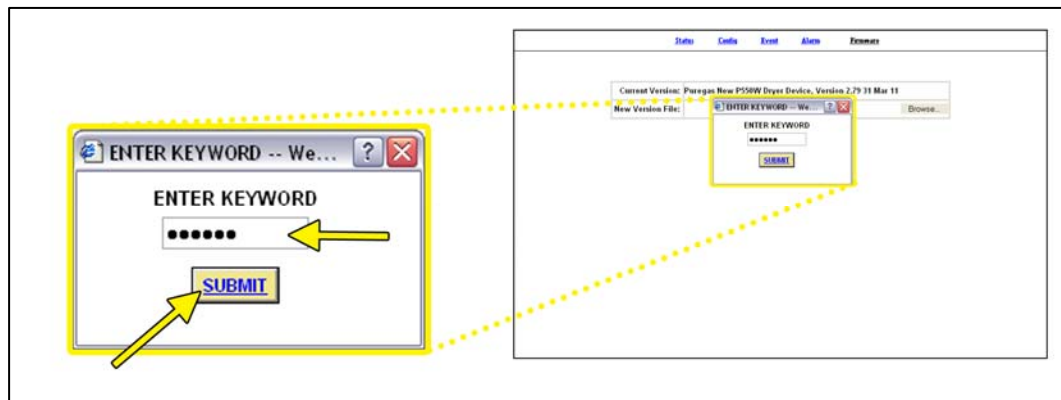

8.19.1.5 Click on **SUBMIT** Button when done. This will lock in the new firmware version.

8.20 Connecting via SNMP

Using SNMP to connect and communicate with the P550W Series Air Dryer is dependant upon the specific SNMP Management software used on your network.

This software requires a SNMP Definition & Configuration File (MIB file) in order to properly communicate with the Air Dryer. This file is named “PuregasP550W.mib” and is located on the Mini CD included with your Air Dryer. It is necessary to import this file into your SNMP operating software.

NOTE: Reference Appendix section 14.3 for a list of SNMP Parameters including Limits, Defaults, and Formats.

9. Testing Your Dryer

9.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

Depressurizing the air Dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the control board without depressurizing the air Dryer first, or **damage to the control board will occur.**

9.2 Measuring Compressor Amp Draw




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some these components to become hot when in operation or standby.

With the Compressor running:

9.2.1 Open Panel (see section 8.8).

9.2.2 Locate wire #5 coming directly from the compressor.

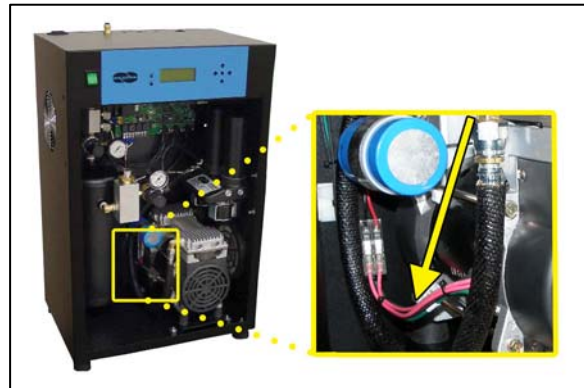

9.2.3 Use an Amp Meter to measure the running amps.

With the compressor running, the running amps should measure **5.0 amps or below.**



9.2.4 Close Panel.

If the compressor measures over 5.0 running amps, see section 13.16 for troubleshooting information.

9.3 Measuring Compressor Voltage




WARNING!


Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.

9.3.1 Open Panel (see section 8.8).

9.3.2 Locate the relay terminal block on the control board inside the air Dryer.

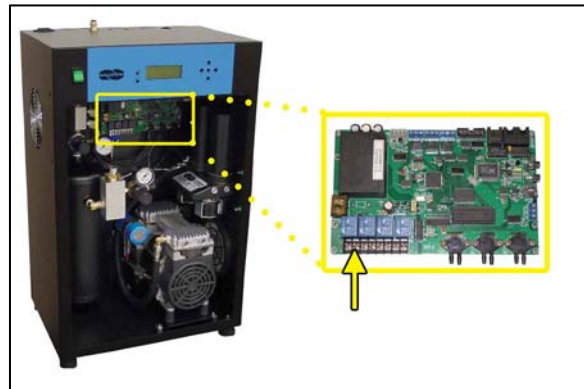


9.3.3 Slide off clear plastic terminal block cover.

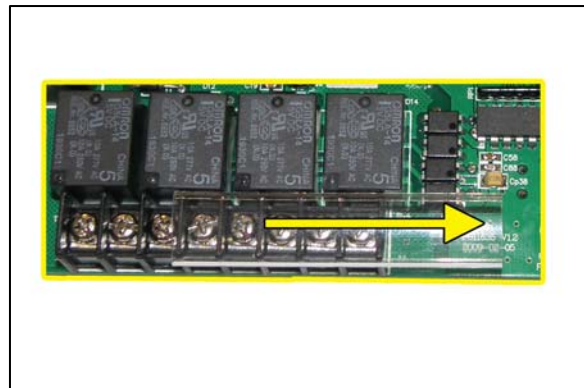


With the Compressor running:

9.3.4 Use a Voltmeter to measure across the board terminals where wires #5 and #6 are connected.
The voltage should measure **120 VAC ($\pm 10\%$)**.

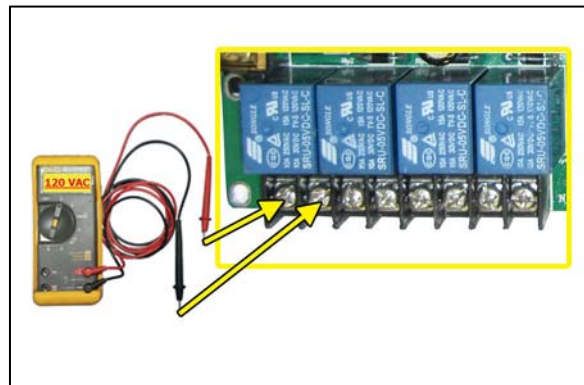


With the Compressor NOT running:

- 9.3.5** Use a Voltmeter to measure across the board terminals where wires #5 and #6 are connected.
The voltage should measure **0 VAC ($\pm 10\%$)**.

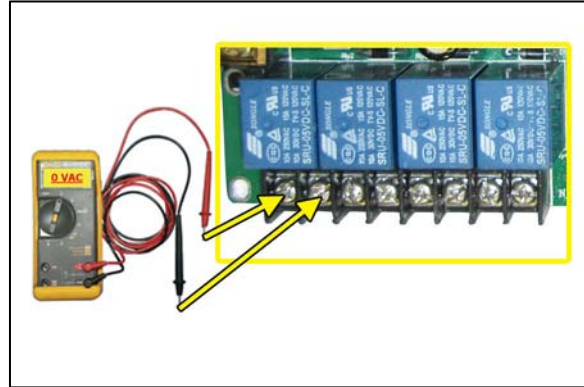

- 9.3.6** Replace the clear plastic terminal block cover.

- 9.3.7** Close Panel.

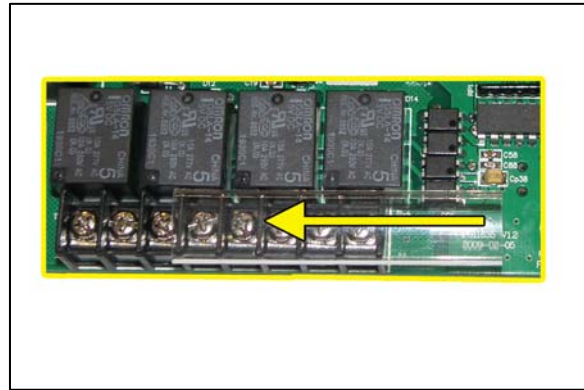

If any of the voltage measurements are different than indicated above, the Control Board is defective and should be replaced. See sections 11.1 for part detail and 11.5 for ordering information.

9.4 Measuring Incoming Voltage




WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.


9.4.1 Open Panel (see section 8.8).

9.4.2 Locate the Incoming **POWER** connector inside the Dryer.

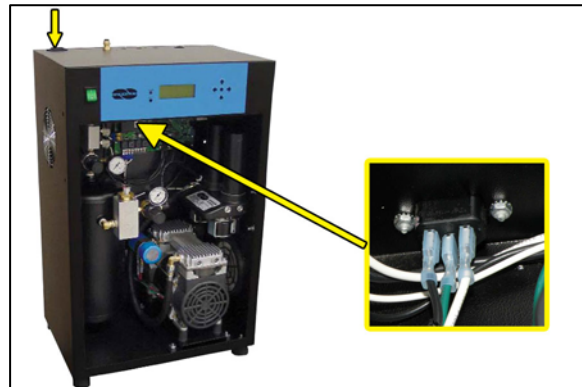

9.4.3 Use a Voltmeter to measure the voltage (inside Dryer):

9.4.3.1 Place the probes between the Power connector and terminal insulation so that they touch the metal contacts for **BLACK (BROWN) wire** and **WHITE (BLUE) wire**.

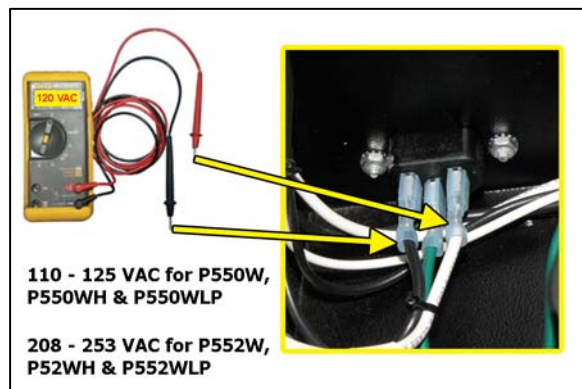

The voltage should measure **110 - 125 VAC** for the P550W, P550WH and P550WLP or **208 - 253 VAC** for the P552W, P552WH and P552WLP.

9.4.4 Close Panel.

If the incoming voltage measures less than indicated above, it is recommended that steps be taken at your facility to increase the power to the recommended level of voltage.

9.5 Measuring Voltage from AC Step-Down Transformer




WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.

For P552W, P552WH and P552WLP Dryers:


9.5.1 Open Panel (see section 8.8).

9.5.2 Locate the **POWER**
Switch.

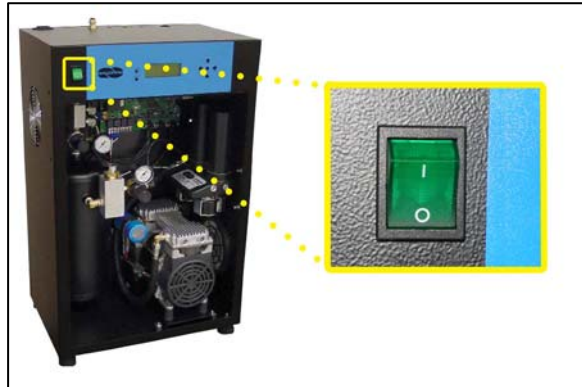

9.5.3 Use a Voltmeter to measure
the voltage (inside Dryer):

9.5.3.1 Place the probes
between the Power
Switch and terminal
insulation so that they
touch the metal contacts
for **BLACK (BROWN)**
wire #1 and **WHITE (BLUE)** wire #2.

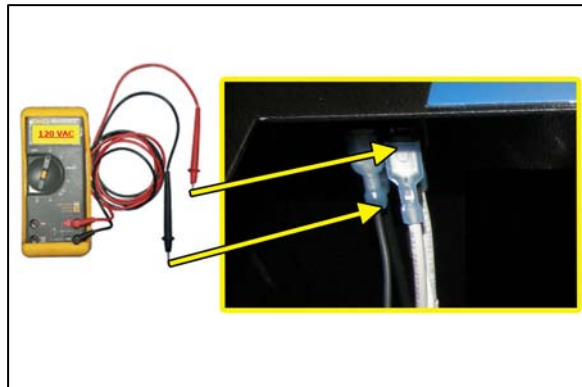

9.5.4 Close Panel.

The voltage should measure **110 - 125 VAC**.

If the voltage at the power switch measures less than 110 VAC and the incoming power voltage is within specifications, it is recommended that the AC transformer is replaced. See section 11.5 for ordering information

9.6 Testing Consistent Heatless Dryer Cycling




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.

With the Compressor running:

9.6.1 Open Panel (see section 8.8).

9.6.2 Place a piece of insulating material over the compressor for this test (*i.e. piece of cardboard*).

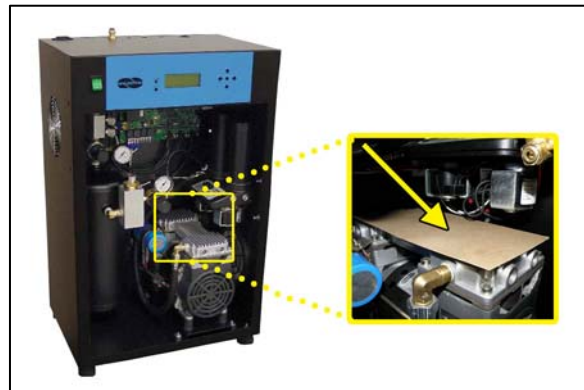


9.6.3 Locate the heatless Dryer purge solenoids inside the air Dryer




9.6.4 Place your hand beneath the purge solenoids to feel for purging air. Air should:

- Purge from Tower 1 side
- Purge from Tower 2 side
30 Seconds later
- Purge from Tower 1 side
30 Seconds later
- ...and so on.

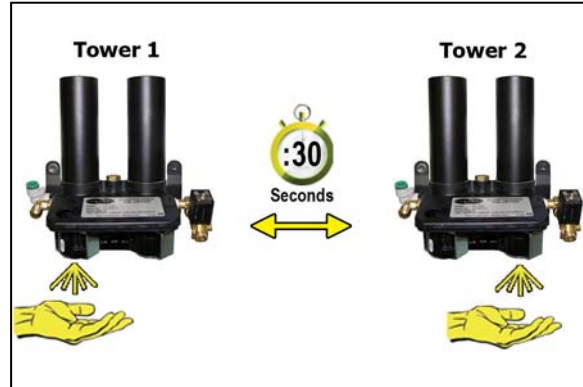

9.6.5 Remove insulating material from top of the compressor.

9.6.6 Close Panel.

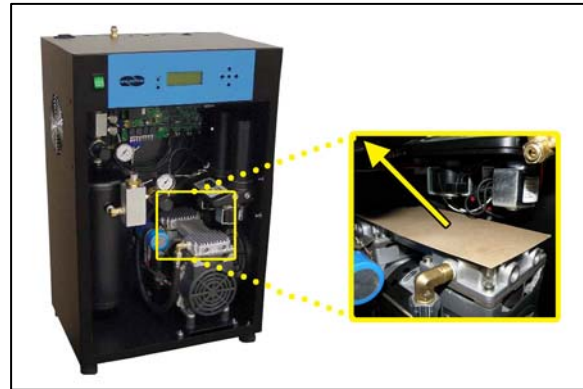

If the Heatless Dryer is not cycling consistently as described, see section 13.13 for troubleshooting information.

9.7 Testing Unloader Valve

With the Compressor running:

- 9.7.1** Locate the Unloader Valve on the right side of the heatless Dryer.



- 9.7.2** Place your hand over the Unloader Valve to feel for air flow.

Air should **NOT** flow from this fitting continuously. Air should only be released in a short burst when the compressor shuts off.




If air flows from this valve continuously the Unloader Valve is either defective and should be replaced. See sections 11.3 for part detail and 11.5 for ordering information.

9.8 Measuring Heatless Dryer Solenoid Voltage

With the Compressor running:


9.8.1 Locate the Heatless Dryer Cycle Timer.

The timer has three (3) sets of terminals (from left-to-right):
“**VALVE**” – Left solenoid
“**IN**” – Incoming power
“**VALVE**” – Right solenoid

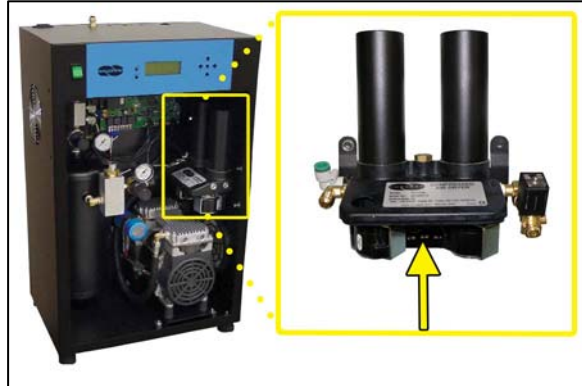

9.8.2 Use a Voltmeter to measure the DC voltage across each set of “**VALVE**” terminals.

Continue to measure for up to 45 seconds if no voltage is initially measured.

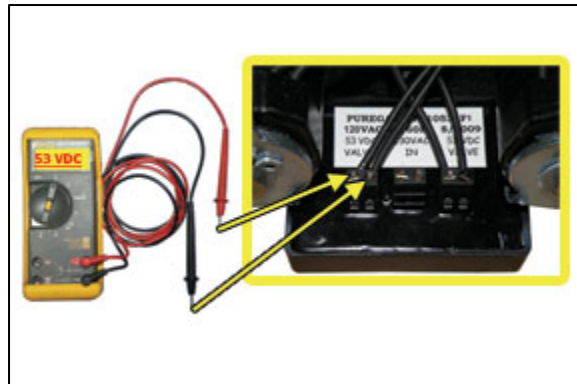

The voltage should measure **53 Volts DC**.

If the voltage does not measure 53 Volts DC, this is an indication that the Cycle Timer is defective and should be replaced. See sections 11.3 for part detail and 11.5 for ordering information.

9.9 Testing Air Dryer Fan

NOTE: To test the fan, the cabinet temperature must be above 90° F.

- 9.9.1** Place your hand outside the Dryer to feel for air being blown outwards.



NOTE: The fan will turn OFF when the cabinet temperature is below 80° F.

If the fan is not blowing air outwards as described:

- *Verify the cabinet temperature is above 90° F.*
- *Check for loose wiring. Refer to the Wiring Diagram (section 14.1)*
- *Replace defective fan (see sections 11.1 for part detail and 11.5 for ordering information).*
- *Replace defective control board if fan does not respond properly to temperature changes (see sections 11.1 for part detail and 11.5 for ordering information).*

9.10 Testing Compressor ON/OFF Cycling

- 9.10.1** When the Unit Screen (8.5.5.1) appears on the display, press the **HOLD** Button on the Front Panel to freeze that screen.



With Compressor running:

- 9.10.2** Verify the compressor shuts down when the tank pressure (**TANK**) reaches **50.0 PSI**.

*If the tank pressure (**TANK**) fails to reach 50 PSI, see section 13.15 for troubleshooting information.*

**With Compressor NOT running:**

⚠ CAUTION: Be careful when removing Air hose. System is pressurized.

- 9.10.3** Depressurize air Dryer (see section 8.3.1)

- 9.10.4** Verify the compressor turns on when the tank pressure (**TANK**) falls to **20.0 PSI**.



- 9.10.5** Reconnect air hose.

If the Compressor Cycling fails either test described, it indicates a problem with the Control Board which will need to be replaced. See sections 11.1 for part detail and 11.5 for ordering information.

9.11 Testing High Compressor Last Run Time Alarm

⚠ CAUTION: Be careful when removing Air hose. System is pressurized.


NOTE: For this test, allow the Display Screen to cycle through the information screens.

9.11.1 Start timing when the compressor turns on.

9.11.2 Depressurize air Dryer (see section 8.3.1)

This prevents the compressor from shutting down.

When the compressor runs for 3:00 minutes (unless adjusted to a different Set Point by the user), a High Compressor Last Run Time (**LAST RUN**) alarm should appear on the System Screen.

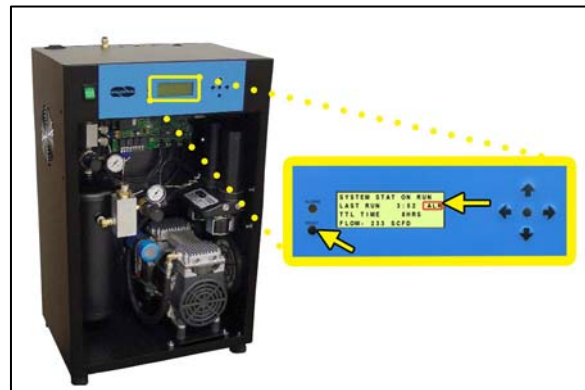

9.11.3 Reconnect air hose.


9.11.4 Press the **RESET Button**.

*If you are unable to create a High Compressor Last Run Time (**LAST RUN**) alarm as described, see section 13.18 for troubleshooting information.*

9.12 Testing Humidity Alarm and System Shutdown


⚠ CAUTION: Be careful when removing Air hose. System is pressurized.

9.12.1 Power the air Dryer **OFF**.

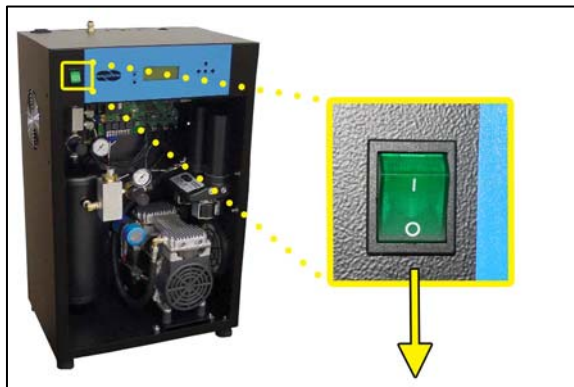


9.12.2 Depressurize air Dryer (see section 8.3.1)

9.12.3 Unscrew and remove the Humidity Sensor from the Humidity Block.

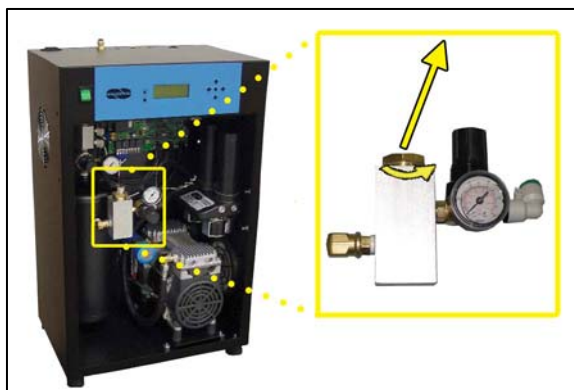


9.12.4 Power the air Dryer **ON**.

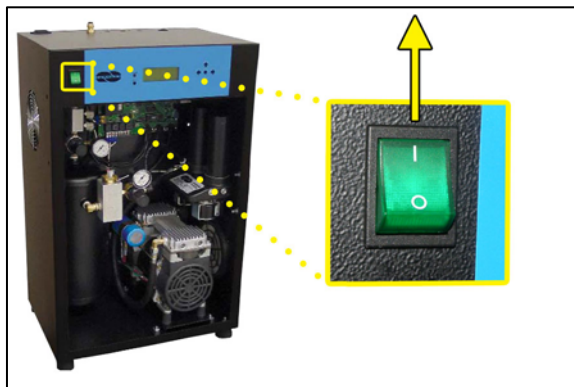


Allow the Humidity reading to rise over 10.0%.


9.12.5 After three (3) minutes, verify that a Humidity Alarm appears and the Dryer goes into **SHUTDOWN** mode.

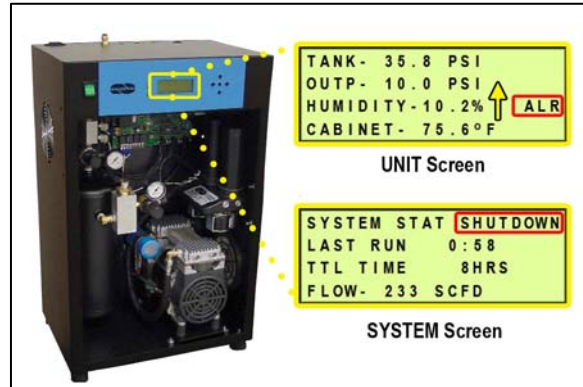

9.12.6 Replace the Humidity Sensor into the Humidity Block.

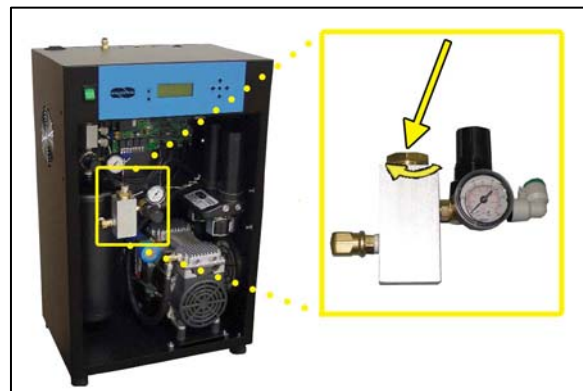

9.12.7 Press the **RESET Button** to clear the Humidity alarm.

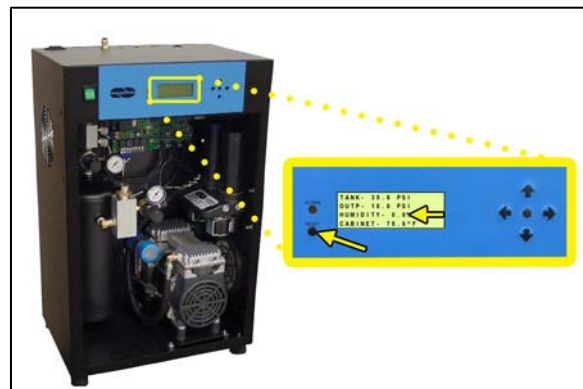

If you are unable to create a Humidity / Shutdown alarm as described, see section 13.10 for troubleshooting information.

9.13 Testing High Outlet Pressure Alarm

- 9.13.1** Make a note of the current Outlet Pressure (**OUTP**) reading.



- 9.13.2** Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).



- 9.13.3** Turn knob clockwise until Outlet Pressure (**OUTP**) reading climbs **over 10.0 PSI** (**over 7.50 PSI** - LP Models).

After one (1) minute, the High Pressure Alarm should appear on the display.

- 9.13.4** Turn Outlet Pressure Regulator knob counter-clockwise until Outlet Pressure (**OUTP**) reading lowers to the reading recorded in step 9.13.1



- 9.13.5** Push knob in to lock (or tighten the retaining nut – LP Models).

- 9.13.6** Press the **RESET Button**.

If you are unable to create a High Outlet Pressure Alarm as described, see section 13.6 for troubleshooting information.

9.14 Testing Low Outlet Pressure Alarm

- 9.14.1** Make a note of the current Outlet Pressure (**OUTP**) reading.



- 9.14.2** Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).



- 9.14.3** Turn knob counter-clockwise until Outlet Pressure (**OUTP**) reading drops **below 2.0 PSI (below 0.30 PSI – LP Models)**.

After one (1) minute, the Low Pressure Alarm should appear on the display.

- 9.14.4** Turn Outlet Pressure Regulator knob clockwise until Outlet Pressure (**OUTP**) reading rises to the reading recorded in step 9.14.1



- 9.14.5** Push knob in to lock (or tighten the retaining nut – LP Models).

- 9.14.6** Press the **RESET Button**.

If you are unable to create a Low Outlet Pressure Alarm as described, see section 13.8 for troubleshooting information.

9.15 Testing Air Fittings & Hoses for Leaks

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**


With Compressor NOT running:

9.15.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

9.15.2 Use a 1-inch paint brush to dab soapy water on the air fitting or hose connection to be tested.

If air bubbles appear at the connection, this indicates that air is leaking from the connection.

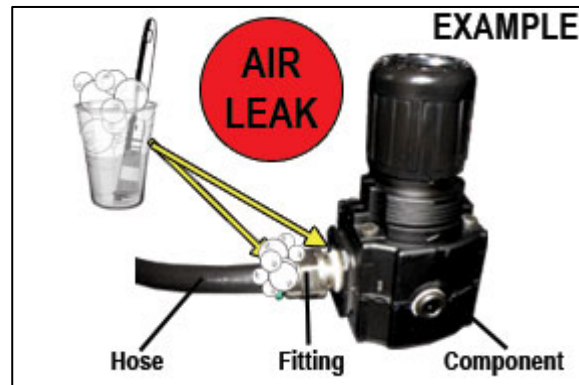

If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect the hose end*
- *Replace the fitting / hose / component*

10. Maintaining Your Dryer

In order to ensure that your P550W Series Air Dryer continues to operate efficiently and reliably, PUREGAS recommends performing the following maintenance procedures at the specified Six Month and 8,000 Hour intervals.

It is also recommended that you print out the included *Six Month Maintenance (section 10.2)* and *8,000 Hour Maintenance (section 10.3)* log sheets and record all completed maintenance for historical tracking and reference purposes.

The log sheets include a Section reference column which indicates the User's Guide section containing the information about the specific procedure. Please refer to these sections for detailed procedural information.

NOTE: When operating at higher ambient temperatures, it is recommended that maintenance be performed more frequently.

NOTE: After 16,000 hours of run time, PUREGAS recommends sending in your compressors and heatless dryers for a complete and comprehensive rebuild by our Service Department technicians. *See sections 12.1 and 12.2 for information on services and contacting PUREGAS.*

10.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.

**WARNING!**

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.

**CAUTION!**

SHUT DOWN IMMEDIATELY FOR REPAIRS if the air compressor shows any evidence of overheating or presents excessive noise.

**CAUTION!**

Depressurizing the air Dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air Dryer first, or **damage to the Control Board will occur.**

**IMPORTANT!**

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air Dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

**IMPORTANT!**

After performing any maintenance, always soap test pressure fittings to check for air leaks. Also, check for any loose or disconnected wiring.

10.2 Six Month Maintenance

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____

DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Months)				
		6	12	18	24	30
Install Six Month Maintenance Kit P011798	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8.5.5.2					
Measure & Record Compressor Amp Draw	9.2					
Measure & Record Incoming Voltage (must be 110 - 125 VAC for P550W, P550WH and P550WLP models and must be 208 - 253 VAC for P552W, P552WH and P552WLP models)	9.4					
Test High & Low Outlet Pressure Alarms	9.13 & 9.14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set System Pressure (50 PSI)	8.8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure (17 PSI)	8.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	8.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Fan	9.9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test High Compressor Last Run Time Alarm	9.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Humidity Alarm & System Shutdown	9.12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER

10.3 8,000 Hour Maintenance

Under typical operating conditions:

8,000 hours of run time will occur between one (1) and two (2) years of use.

This will be identified by a **TTL TIME** Alarm on the display.

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____


DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Hours)				
		8,000	16,000	24,000	32,000	40,000
Install 8,000 Hour Maintenance Kit P011673	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8.5.5.2					
Measure & Record Compressor Amp Draw	9.2					
Set System Pressure (50 PSI)	8.8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure (17 PSI)	8.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	8.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Reset TTL TIME Reading to Zero	8.7.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER


11. Replacement Parts & Accessories

11.1 Dryer Parts

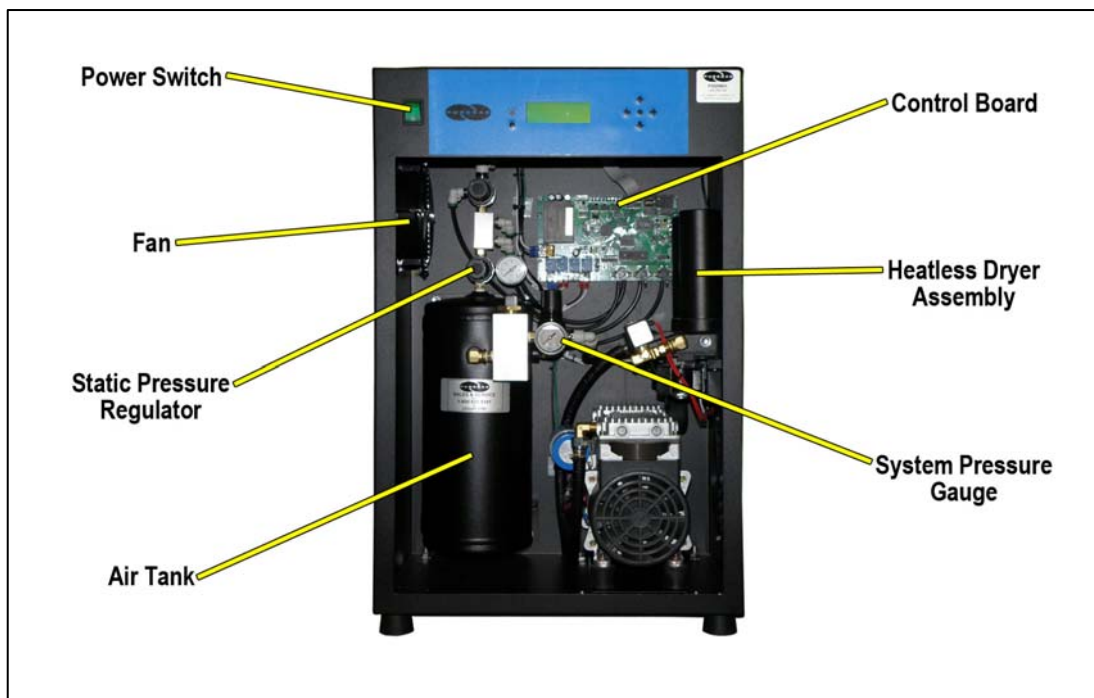


Description	Part Number	Quantity	Recommend Spare
Power Switch	M038428	1	
Fan	P4080	1	
Static Pressure Regulator	P010279	1	
Air Tank		1	
Control Board -			
Standard Pressure	P011816	1	✓ (1)
Low Pressure	P011862		
Heatless Dryer Assembly	<i>See section 11.3 for detail</i>		
System Pressure Gauge (0-100 PSI)	P010695	1	

11.2 Dryer Parts cont.

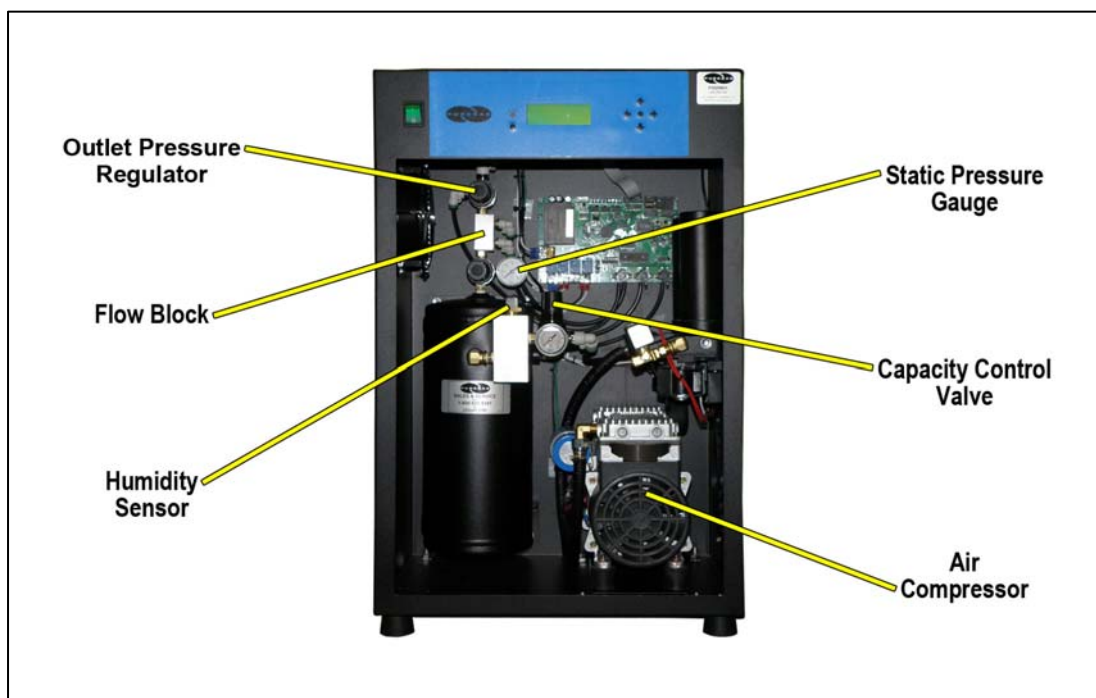





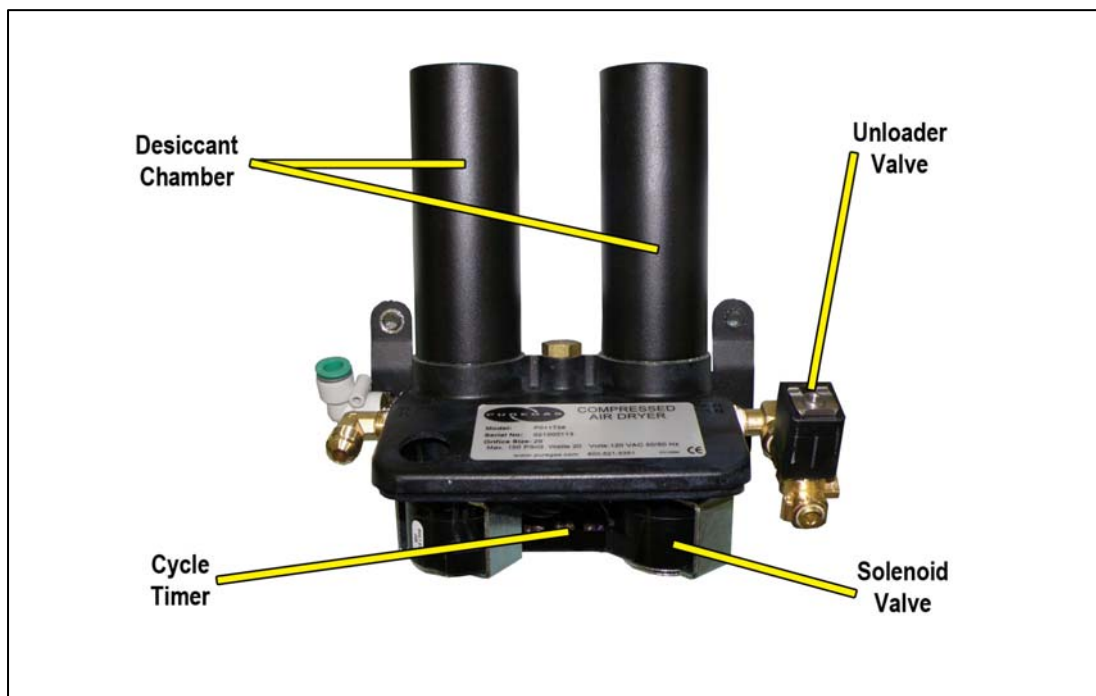

Description	Part Number	Quantity	Recommend Spare
Outlet Pressure Regulator - Standard Pressure Low Pressure	P010279 P012316	1	
Flow Block		1	
Humidity Sensor	<i>In Kit P011798. See section 11.4</i>		
Static Pressure Gauge (0-30 PSI)	P8345	1	
Capacity Control Valve	P010492	1	✓ (1)
Air Compressor	P011660	1	

11.3 Heatless Dryer Assembly Parts



Description	Part Number	Quantity	Recommend Spare
Heatless Dryer	P011738	1	
Desiccant Chamber	P2004036	2	
Cycle Timer	P010530F1	1	
Unloader Valve	P011839	1	
Solenoid Valve	<i>In Kit P011673. See section 11.4 for detail.</i>		

11.4 Accessories for Your Dryer

	Description	Part Number	Recommend Spare
	Six Month Maintenance Kit Includes air intake filter, compressor muffler, and humidity sensor.	P011798	✓ (2)
	8,000 Hour Maintenance Kit Includes heatless Dryer maintenance kit and compressor maintenance kit.	P011673	✓ (1)
	Universal Rack Mounting Kit Includes mounting brackets and hardware for 19" or 23" racks.	P011674	
	Wall Mounting Kit Includes mounting brackets and hardware.	P011773	
	Cycle Kit Allows multiple dryers to be cycled.	P08033W	
	Cycle Kit Interface Kit	P012341	

11.5 Ordering Parts from PUREGAS



IMPORTANT!

Instruction for the replacement of individual listed components goes beyond the scope of this User's Guide and will not be covered. Please refer to the information included with the specific replacement part for this instruction.

Once you have identified your required parts and accessories, contact the PUREGAS Inside Sales / Service department to order:

(800) 521-5351 (**option 2**)

Fax – (303) 657-2205

sales@puregas.com

parts@puregas.com

12. Service & Repair

Only PUREGAS can offer factory direct rebuilds backed by a 6 month factory warranty.

- 2 week turnaround time
- Estimates available upon request
- Minimum service charge fee applies

12.1 Services Offered

- **Piston Compressor Rebuild**
 - Replace motor bearings, piston rod assemblies, and install a complete compressor maintenance kit.
 - Test air flow, air pressure, and electrical performance
- **Heatless Dryer Rebuild**
 - Replace desiccant, o-rings, check valves, springs, and complete solenoid assembly
 - Test proper component operation
- **Desiccant Tower Repack**
 - Clean out tower and replace desiccant, filter, and o-ring
- **Circuit Board Repair** (Limited to current model boards only)
- **Complete Dryer Repair**

12.2 Initiating a Service Transaction

- Contact our Parts & Service Department at **1-800-521-5351 (option 3)** to obtain a Return Authorization (RA) number.
- Carefully package the item(s) to be returned.
- Mark the Return Authorization (RA) number on the outside of the shipping container.
- Include the main address and phone number of the individual to contact for related inquiry and follow-up information.
- Include the purchase order number.

13. Troubleshooting Your Dryer

13.1 Before You Call PUREGAS

PLEASE READ THIS SECTION FIRST. It is important that you use the following sections in order to diagnose and attempt to fix the problem with your air Dryer before placing a call to PUREGAS Technical Support.

This troubleshooting guide is intended to simplify the isolation of problems, present possible causes, provide test procedures for verification, and suggest corrective actions to restore the air Dryer back to normal operation. Each section begins with the most likely cause(s) of the issue. Otherwise, they start from the simplest possibilities and progress to more complicated ones.

This troubleshooting guide is designed to be easy to follow and very effective when used properly. It is suggested to always start at the beginning of the specific problem section and continue in sequence, following the procedures indicated.

13.2 Safety & Warning Information



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air Dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



CAUTION!

Depressurizing the air Dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air Dryer first, or **damage to the Control Board will occur.**



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.



IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

13.3 Air Dryer Won't Power ON

Possible Cause	Check	Corrective Action
POWER Switch in OFF position	Verify POWER switch is in the ON position (section 8.4)	Turn POWER switch to the ON position (section 8.4)
No incoming voltage to air Dryer	Measure incoming voltage (section 9.4)	Troubleshoot facility power supply to air Dryer

13.4 Display Screen Not Functioning

Possible Cause	Check	Corrective Action
Dryer experienced a power spike		Power the air Dryer OFF for 15+ seconds. Power the air Dryer ON .
Ribbon cable disconnected	Verify ribbon cable from the decal is connected at the display board	Reconnect the ribbon cable properly.

13.5 High Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too high	Verify Outlet Pressure (OUTP) reading (section 8.5.5.1)	Adjust Outlet Pressure Regulator (section 8.11)
High Outlet Pressure Alarm set point too low	Verify High Outlet Pressure Alarm set point (section 8.7.2)	Raise High Outlet Pressure Alarm set point (section 8.7.2)

13.6 Can't Create a High Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted (section 8.11)	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
High Outlet Pressure Alarm set point higher than default setting	Verify High Outlet Pressure Alarm set point (section 8.7.2)	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading climbs over verified set point (section 9.13)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is higher than the High Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.1) if Outlet Pressure (OUTP) reading is over verified High Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.7 Low Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too low	Verify Outlet Pressure (OUTP) reading (section 8.5.5.1)	Adjust Outlet Pressure Regulator (section 8.11)
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.5.5.2)	Troubleshoot High Flow condition (section 13.11)
Low Outlet Pressure Alarm set point too high	Verify Low Outlet Pressure Alarm set point (section 8.7.3)	Lower the Low Outlet Pressure Alarm set point (section 8.7.3)
Leak in the air system	With no outlet flow, test fittings and hoses for leaks (section 9.15)	Tighten any loose connections as required

13.8 Can't Create a Low Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted (section 8.11)	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
Low Outlet Pressure Alarm set point lower than default setting	Verify Low Outlet Pressure Alarm set point (section 8.7.3)	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading drops below verified set point (section 9.14)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is lower than the Low Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.1) if Outlet Pressure (OUTP) reading is under verified Low Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.9 High Humidity



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.8)	Adjust System Pressure to 50 PSI, \pm 2 PSI. (section 8.8)
Low Flow Rate	Verify Flow Rate (FLOW) reading is low (section 8.5.5.2)	Install the Tee Tube Union and the Precision Bleed Orifice at output of the air Dryer (section 6.5.16)
High Humidity Alarm set point too low	Verify High Humidity Alarm set point (section 8.7.4) If Flow Rate is low, allowing a higher alarm set point (up to 10%) will allow Dryer to run within acceptable levels.	Raise High Humidity Alarm set point (section 8.7.4) Over 10% not recommended
Defective Humidity Sensor	Perform the Testing Humidity Alarm and System Shutdown test (section 9.12)	Troubleshoot <i>Can't Create a High Humidity Alarm / Shutdown</i> condition (section 13.10)
Heatless Dryer not cycling between towers	Verify consistent Heatless Dryer cycling (section 9.6)	Troubleshoot <i>Inconsistent Heatless Dryer Cycling</i> condition (section 13.13)
Defective Control Board	Unplug Humidity Sensor from Control Board (see section 11.1 for Board location) Humidity reading should drop to 0%	If Humidity did not drop to 0%, replace Control Board (section 11.1)

13.10 Can't Create a High Humidity Alarm / Shutdown

These troubleshooting steps assume that the Humidity Element is removed from the Humidity Block during the *Testing Humidity Alarm and System Shutdown* (section 9.12) procedures.

Possible Cause	Check	Corrective Action
Humidity Sensor Cable disconnected	Verify that Humidity Sensor cable is connected to the Control Board	Connect Humidity Sensor cable
Defective Humidity Sensor	Verify that Humidity reading fails to climb higher than 15% or creates sporadic readings	Replace Humidity Sensor (section 11.2)
Defective Control Board	Verify that Humidity reading is over 15% for more than 1 minute	Replace Control Board if no alarm is created and system does not shut down (section 11.1)

13.11 High Flow Rate Alarm

Possible Cause	Check	Corrective Action
Air leak in downstream cable outside of Dryer	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.5.5.2)	Fix downstream problem
Air leak inside of Dryer	Test fittings and hoses for leaks (section 9.15)	Reconnect or replace bad fitting / hose
High Flow Alarm set point too low	Verify High Flow Alarm set point (section 8.7.1)	Raise High Flow Alarm set point (section 8.7.1)

13.12 High Cabinet Temperature Alarm

Possible Cause	Check	Corrective Action
Fan Failure	Verify fan is running (section 9.9)	Check for loose fan wiring (section 14.1) Replace defective fan (section 11.1)
High Ambient Temperature	Verify temperature of Dryer operating location. Recommended ambient temperature is 40°-85°F.	Lower the ambient temperature of the Dryer's operating location

13.13 Inconsistent Heatless Dryer Cycling

Possible Cause	Check	Corrective Action
Defective Solenoid Valve	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If 53 VDC IS present, replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.4)
Defective Cycle Timer	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If 53 VDC IS NOT present, replace the Cycle Timer (section 11.3)

13.14 Compressor Doesn't Operate

Possible Cause	Check	Corrective Action
Defective compressor	Measure compressor voltage (section 9.3)	If voltage is good, replace compressor (section 11.2) or send it in for repair (section 12.)
Defective control board	Measure compressor voltage (section 9.3)	If measurements are incorrect, replace control board (section 11.1)
System is in Shutdown state	On the Display Panel, verify that the system is in SHUTDOWN state	Press the RESET Button

13.15 Compressor Won't Build Pressure

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.8)	Adjust System Pressure to 50 PSI, \pm 2 PSI. (section 8.8)
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.3)
Leak in air system	Check all hoses and fittings between compressor and Air Tank for air leaks (section 9.15)	Connect, tighten, or replace leaking component

13.16 Compressor Excessive AMP Draw

Possible Cause	Check	Corrective Action
Restriction in air line	Remove Discharge Hose from compressor (hose to the heatless Dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is below the recommended amps, trace hoses from compressor to Unloader Valve looking for restrictions or kinks
Compressor failing	Remove Discharge Hose from compressor (hose to the heatless Dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is still above the recommended amps, replace the compressor (section 11.2) or send it in for repair (section 12.)

13.17 High Compressor Last Run Time Alarm

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.8)	Adjust System Pressure to 50 PSI, \pm 2 PSI. (section 8.8)
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.5.5.2)	Troubleshoot High Flow condition (section 13.11)
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.3)
Defective Heatless Dryer Solenoid Valve	Verify consistent Heatless Dryer cycling (section 9.6) If either side is continuously flowing high amounts of air, the Solenoid Valve is defective.	Replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.4)
Defective control board	Measure voltages at control board (section 9.3)	If measurements are incorrect, replace control board (section 11.1)

13.18 Can't Create a High Compressor Last Run Time Alarm

Possible Cause	Check	Corrective Action
High Compressor Last Run Time Alarm set point higher than the default of 3:00 minutes	Verify High Compressor Last Run Time Alarm set point (section 8.7.5)	Allow the compressor to run longer than the verified set point (section 9.11)
Defective Control Board	Verify that the compressor has run longer than the verified High Compressor Last Run Time Alarm set point (above)	Replace Control Board (section 11.1) if the compressor runs longer than the verified High Compressor Last Run Time Alarm set point by 1 minute or more and fails to create an alarm.

13.19 Compressor Rapid ON/OFF Cycling

Possible Cause	Check	Corrective Action
Defective control board	Measure voltages at control board (section 9.3)	If measurements are incorrect, replace control board (section 11.1)

13.20 Contacting PUREGAS Technical Support

Please read the *Before You Call PUREGAS* section (13.1)

Once you have exhausted all of the potential problems and solutions covered in the *Troubleshooting Your Dryer* section, and you still require further assistance to correct a problem, contact PUREGAS Technical Support:

(800) 521-5351 (option 1)

Have the following information available:

Trouble Ticket # (if following-up on a previous call): _____

Technician Name: _____ **Phone #:** _____


Model #: _____ **Serial #:** _____

Company Name: _____ **Location Name:** _____

City: _____ **State:** _____

14. Appendix

14.1 Wiring Diagram

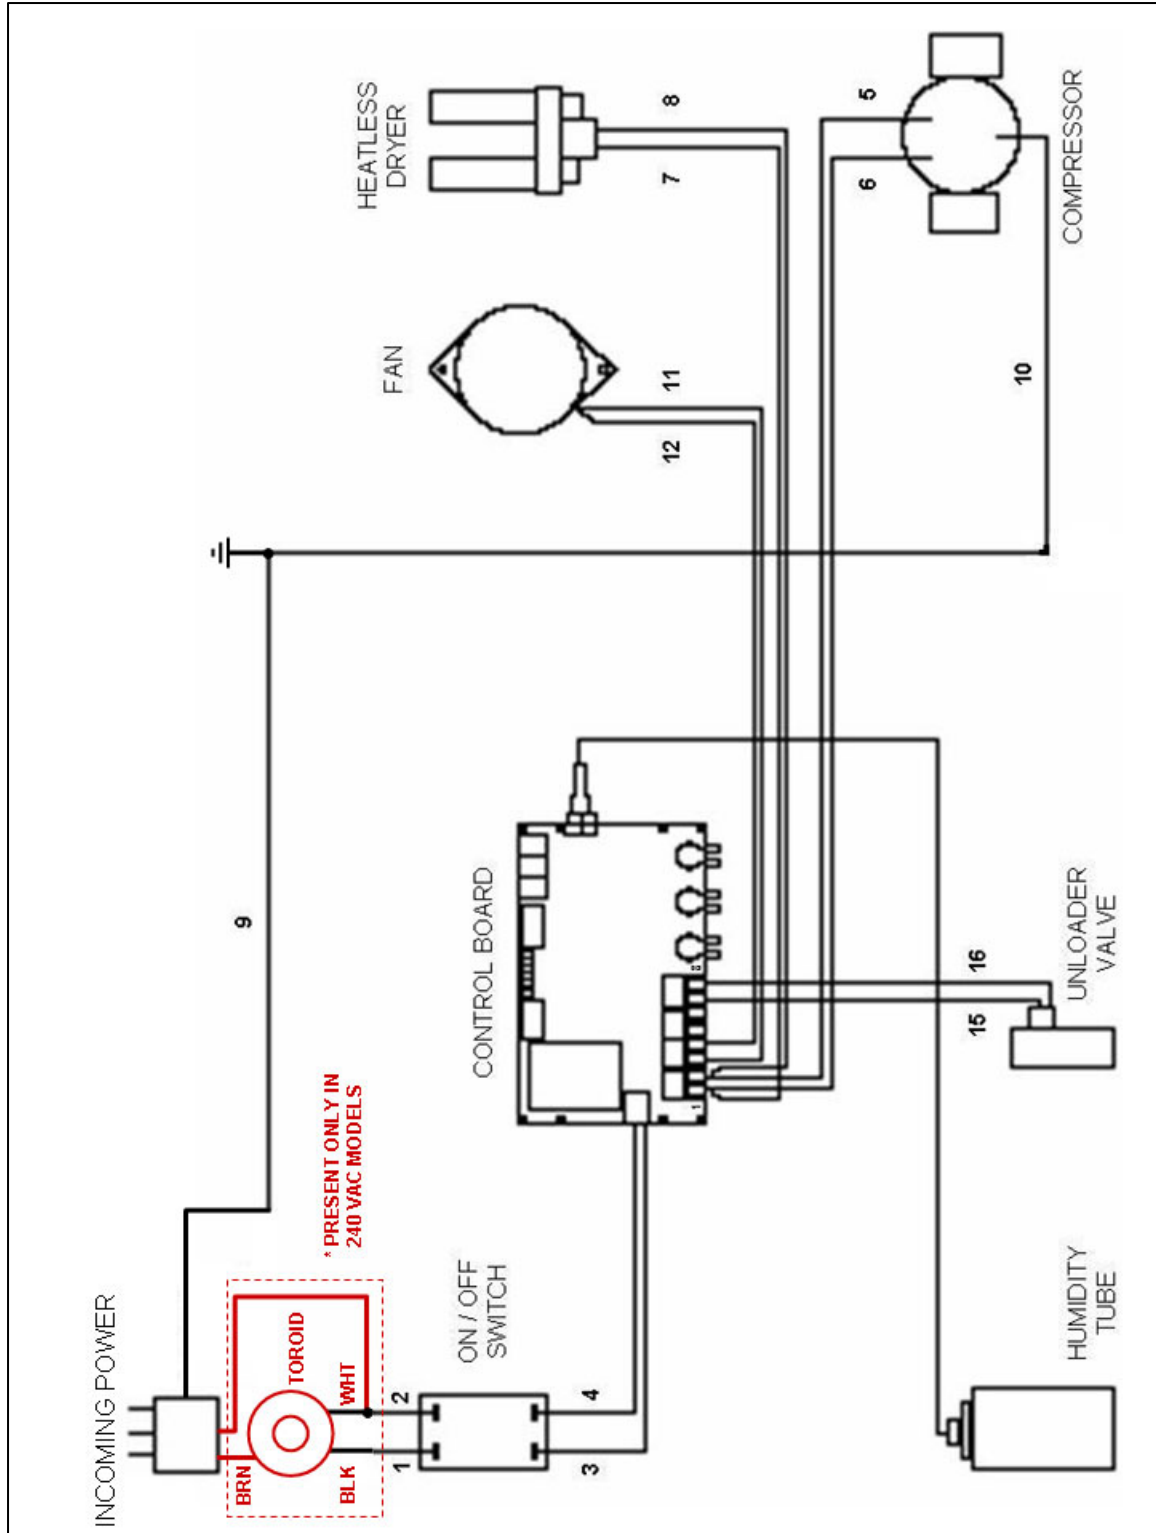

14.2 Set Point Limits and Defaults

14.2.1 System Adjustments

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement
System Pressure			50	PSI
Static Pressure			17	PSI
Outlet Pressure (LP UNITS)	2.0 (0.30)	15.0 (7.50)		PSI
Alarm Delay	OFF	ON	ON	
Startup Delay	0	10	0	Seconds

14.2.2 Alarm Set Points

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement	Shutdown
High Flow Alarm	0	900	500	SCFD	
High Outlet Pressure Alarm (LP UNITS)	0.6 (0.31)	20.0 (7.50)	10.0 (7.50)	PSI	
Low Outlet Pressure Alarm (LP UNITS)	0.5 (0.30)	19.9 (7.49)	2.0 (0.30)	PSI	
High Humidity Alarm	3	15	10	%	YES
High Compressor Last Run Time Alarm	2:00	5:00	3:00	Minutes	
High Cabinet Temperature Alarm			120	Deg F	YES
Compressor Total Run Time Alarm			8000	Hours	

14.2.3 System Operations

Description	ON Value	OFF Value	Default Value	Unit of Measurement
Compressor	20.0	50.0		PSI
Fan	90	80		Deg F

14.3 SNMP Parameters

Device Configuration Information

Device ID	Alphanumeric (Defined by Customer)
Device Model	Alphanumeric (Factory Preset)
Device Firmware Version	Numeric (Factory Preset)
Current Date/Time	Numeric (mm/dd/yy hh:mm)
IP Address	Numeric (xxx.xxx.xxx.xxx)
Subnet Mask	Numeric (xxx.xxx.xxx.xxx)
Gateway Address	Numeric (xxx.xxx.xxx.xxx)
SNMP Trap Server Address	Numeric (xxx.xxx.xxx.xxx)

Status Readings (Read-Only)

Outlet Pressure Reading	Numeric (PSI)
Tank Pressure Reading	Numeric (PSI)
Humidity Reading	Numeric (%)
Flow Reading	Numeric (SCFD)
Cabinet Temperature Reading	Numeric (DEG F)
Compressor Total Run Time Reading	Numeric (Hours)
Compressor Last Run Time Reading	Numeric (Seconds)
System Status	ON / SHUTDOWN
Compressor Status	ON / OFF
Fan Status	ON / OFF
Heater Status (Outdoor Unit Only)	ON / OFF

Alarm Readings (Read-Only)

High Flow Alarm	OK / Alarm
High Outlet Pressure Alarm	OK / Alarm
Low Outlet Pressure Alarm	OK / Alarm
High Humidity Alarm	OK / Alarm
High Cabinet Temperature Alarm	OK / Alarm
High Compressor Last Run Time Alarm	OK / Alarm
Maintenance Required Alarm	OK / Alarm
Total Alarm	OK / Alarm

Configuration Settings (Read-Write)

High Flow Alarm Threshold	Numeric (SCFD)
High Outlet Pressure Alarm Threshold	Numeric (PSI)
Low Outlet Pressure Alarm Threshold	Numeric (PSI)
High Humidity Alarm Threshold	Numeric (%)
High Compressor Last Run Time Alarm Threshold	Numeric (Seconds)
Reset Compressor Total Run Time Reading	Numeric (Hours)
Start Up Delay	Numeric (Seconds)
Alarm Delay	ON / OFF

Alarm Traps Sent to SNMP Server

High Flow
High Outlet Pressure
Low Outlet Pressure
High Humidity
High Cabinet Temperature
High Compressor Last Run Time
Maintenance Required
Total Alarm

15. Limited Warranty Agreement

PUREGAS products carry a one (1) year warranty against defective workmanship and material. This period starts at date of shipment. Not included are the components subject to normal replacement during a year's operating time.

No claims for labor in replacing defective parts or for consequential damages will be allowed. Replacement parts will be invoiced in the regular way, with invoices subject to adjustment after the parts claimed defective are examined at our factory. In addition, no material or parts will be accepted at our factory for in-warranty repairs or credit without previous authorization from PUREGAS.

Responsibility for damages incurred in transit will be borne by the user and the user in turn should file any damage claim against the carrier. All warranty items are F.O.B. Broomfield, Colorado. Freight charges are the responsibility of the user.

This warranty shall not apply to any PUREGAS product which shall have been repaired or altered in any way by anyone other than PUREGAS or authorized personnel so as to affect, in our judgment, its proper functioning or reliability, neither will it apply to any product which has been subject to misuse, negligence, or accident. The installation of unauthorized non PUREGAS parts will void the warranty on those PUREGAS products.

Registration Reminder

If you haven't already done so, please take a moment to register your PUREGAS P550W Series Air Dryer. **Registering is necessary to activate this Limited Warranty on your product.** Once you register, you are eligible to receive free technical support, as well as updates concerning your PUREGAS products.

See Section 7. for details on Registering Your Dryer.

16. Contacting PUREGAS

16.1 General

PUREGAS, LLC
226A Commerce Street
Broomfield, Colorado 80020

(800) 521-5351
(303) 427-3700
Fax – (303) 657-2233

info@puregas.com
www.puregas.com

16.2 Sales

(800) 521-5351 (**option 2**)
Fax – (303) 657-2205

sales@puregas.com
parts@puregas.com

16.3 Service

(800) 521-5351 (**option 3**)
Fax – (303) 657-2205

16.4 Technical Support

(800) 521-5351 (**option 1**)

DON'T FORGET TO REGISTER YOUR DRYER!

See Section 7. for details on Registering Your Dryer.

17. Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.